


FUEL SYSTEM (Programmed Fuel Injection)

INSTALLATION

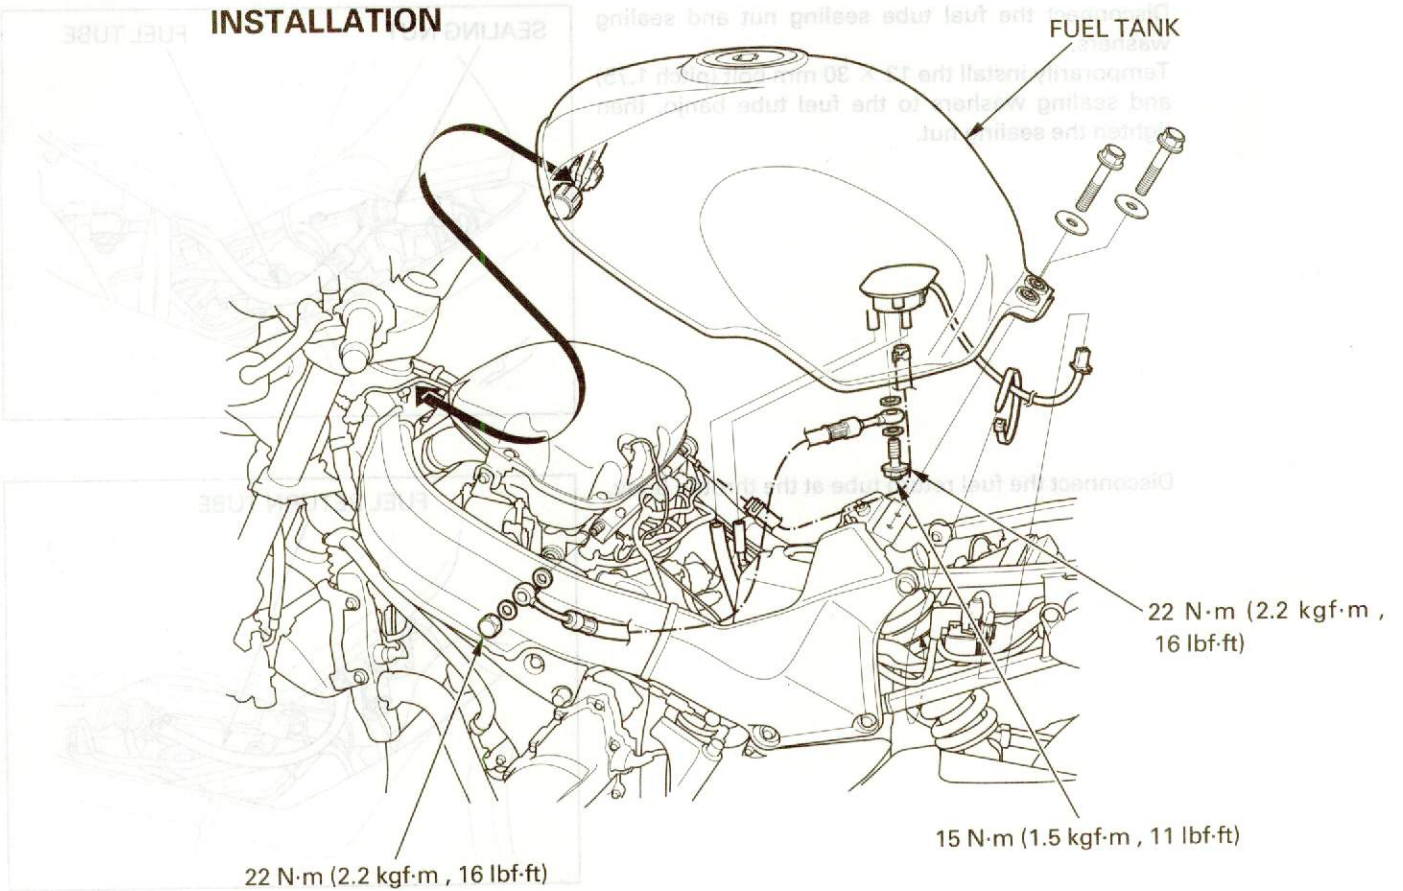

Connect the fuel tube to the fuel pump with new sealing washers.

NOTE:

Align the fuel tube eyelet joint with the stopper on the fuel pump.

Install and tighten the fuel tube banjo bolt to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf-ft)

Connect the fuel return tube to the fuel pump.

Install the fuel tank front bracket into the frame.

CAUTION:

Be careful not to damage the throttle cables.

Support the rear end of the fuel tank (page 5-56).

