

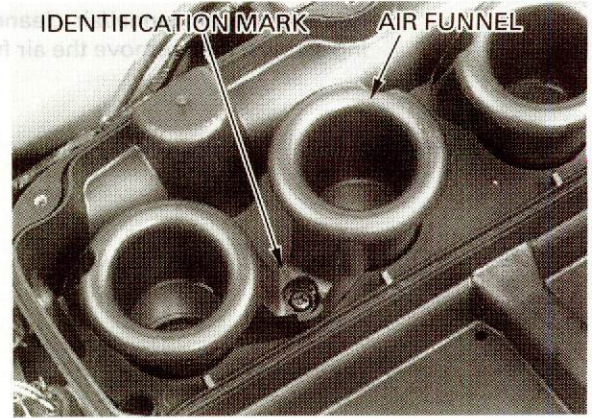


FUEL SYSTEM (Programmed Fuel Injection)



Install the air cleaner housing onto the throttle body.
Install the air funnels in their proper locations referring their identification marks.

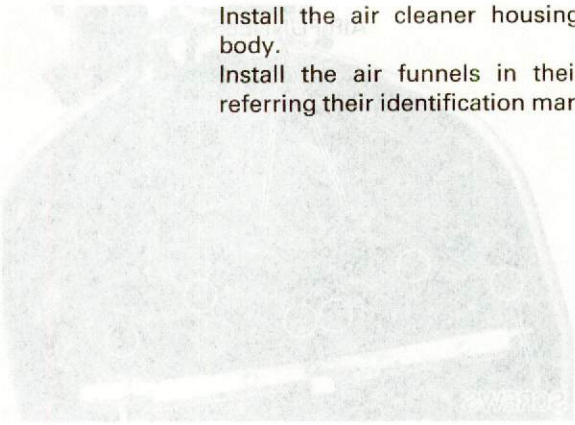

Install and tighten the air funnel/air cleaner housing mounting screws.

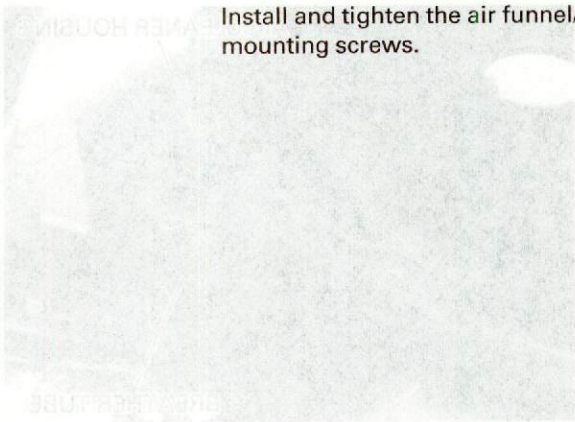

Connect the PAIR air suction hose to the air cleaner housing.

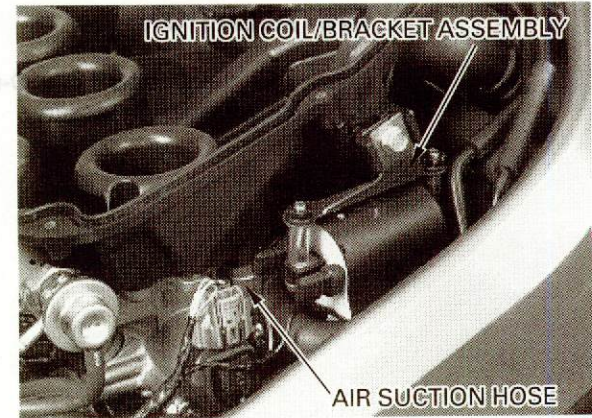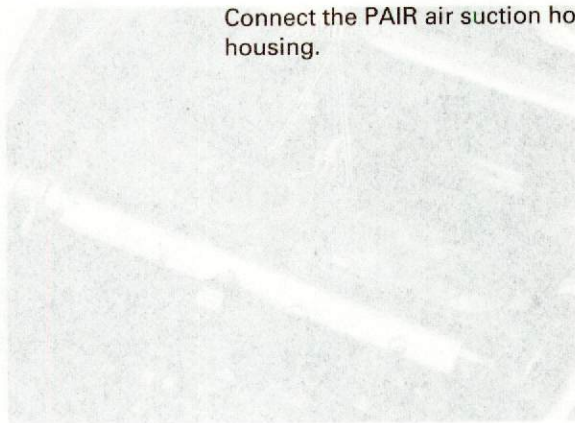

Install the ignition coil bracket assembly to the housing, tighten the bracket bolt securely on both side.

Install the air cleaner element (page 3-5).

