


## FUEL SYSTEM (Programmed Fuel Injection)

Install and tighten the fuel pipe mounting nut to the specified torque.


**TORQUE:** 10 N·m (1.0 kgf·m , 7 lbf·ft)

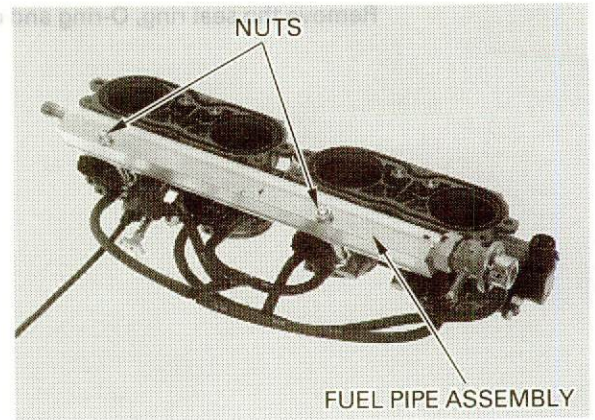

Install the MAP sensor aligning it boss with the hole in the fuel pipe.  
Tighten the mounting screw securely.

Connect the MAP sensor vacuum tube.


Install the throttle body (page 5-66).

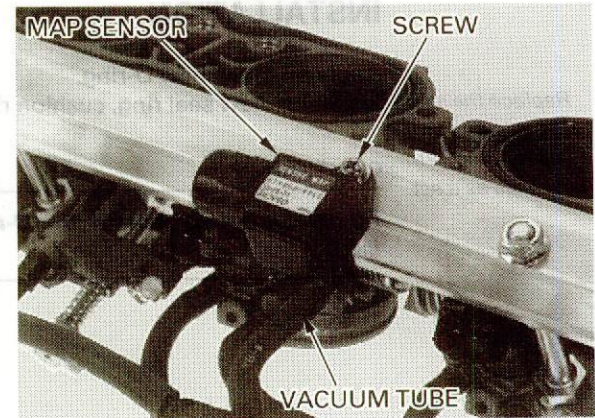

## STARTER VALVE

### DISASSEMBLY

Turn each starter valve adjusting screw in, counting number of turns until it seats lightly.  
Record the number of turns.

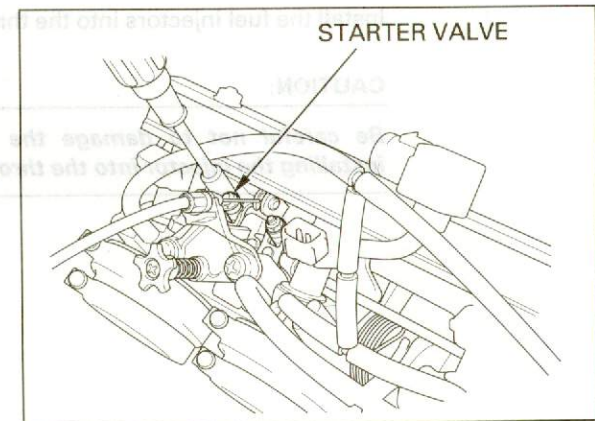

### No. 3/4 starter valve:

Remove the starter valve arm screws and starter valve arm.

