

O₂ SENSOR

REMOVAL

▲WARNING

Do not service the O₂ sensor while the it is hot.



CAUTION:

- *Handle with care of the O₂ sensor.*
- *Do not get grease, oil or other materials to the O₂ sensor air holes.*


Support the rear end of the fuel tank (page 2-11).

Disconnect the O₂ sensor 4P (Gray) connector.

Unfasten the tube/wire band.
Release the O₂ sensor wire from the wire clamp.

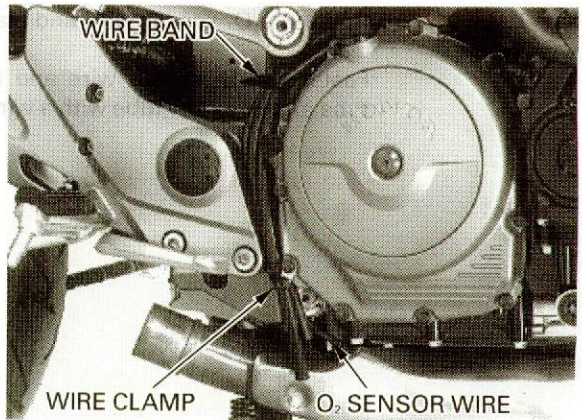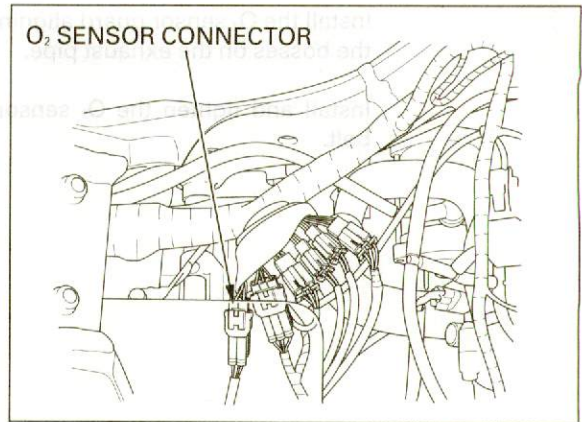

Remove the bolt and O₂ sensor guard.

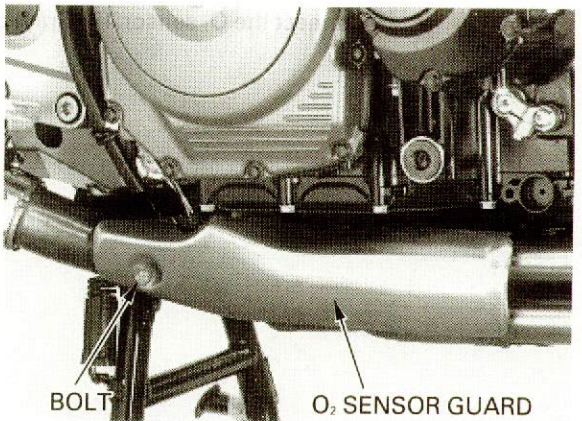

Remove the O₂ sensor unit.

CAUTION:

- *Be careful not to damage the sensor wire.*
- *Do not use impact wrench while removing or installing the O₂ sensor.*

Install the O₂ sensor unit.
Tighten the unit to the specified torque.

TORQUE: 25 N·m (2.5 kgf·m , 18 lbf·ft)

