
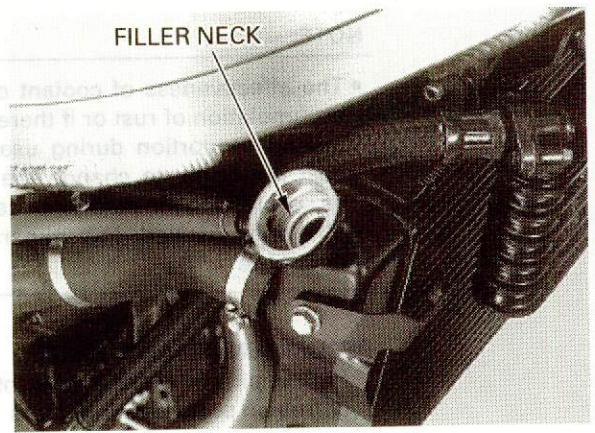


COOLING SYSTEM

Fill the system with the recommended coolant through the filler opening up to filler neck.

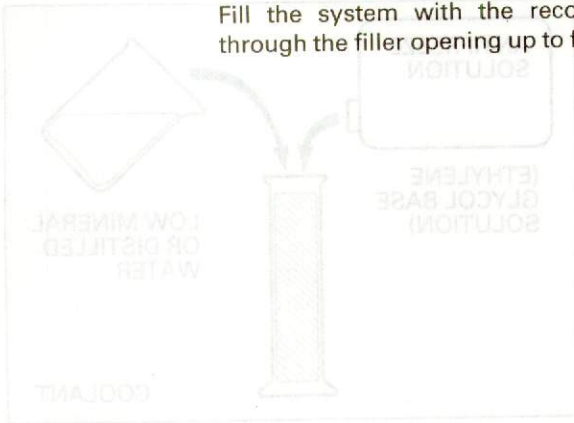

Remove the radiator reserve tank cap and fill the reserve tank to the upper level line.

Bleed air from the system as follow:

1. Shift the transmission into neutral. Start the engine and let it idle for 2–3 minutes.
2. Snap the throttle 3–4 times to bleed air from the system.
3. Stop the engine and add coolant up to the proper level if necessary. Reinstall the radiator cap.
4. Check the level of coolant in the reserve tank and fill to the upper level if it is low.




THERMOSTAT

REMOVAL

Drain the coolant (page 6-5).
Support the rear end of the fuel tank (page 2-11).
Remove the radiator grill (page 2-4).

Remove the bolts and thermostat housing cover.

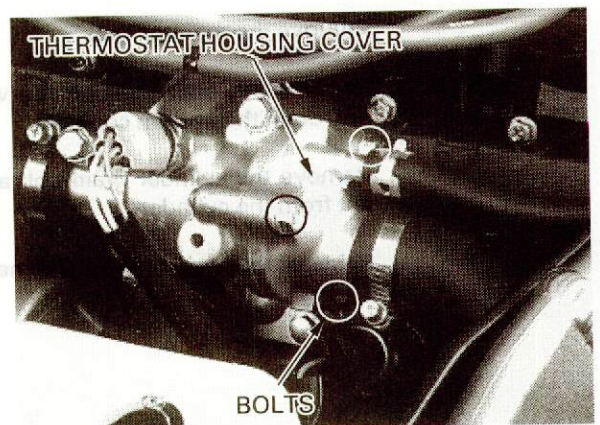

Remove the thermostat from the housing.

