
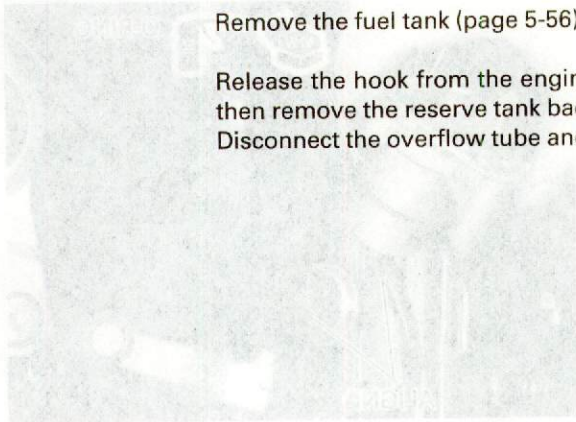


RADIATOR RESERVE TANK



REMOVAL

Remove the seat (page 2-2).
Support the rear end of the fuel tank (page 2-11).

Loosen the shock absorber upper mounting bolt so that the reserve tank mounting grommet is free from mounting bolt.

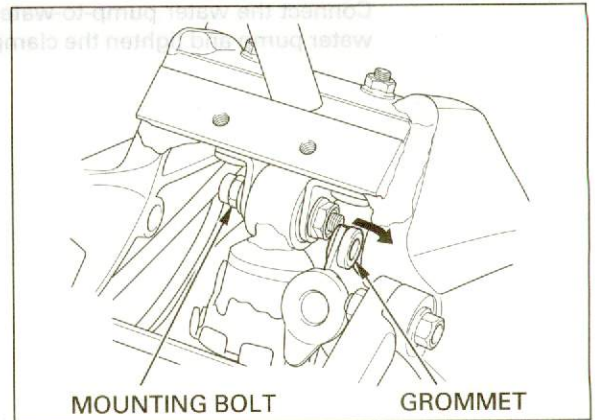


Remove the fuel tank (page 5-56).
Release the hook from the engine mounting collar, then remove the reserve tank backward. Disconnect the overflow tube and siphon tube.

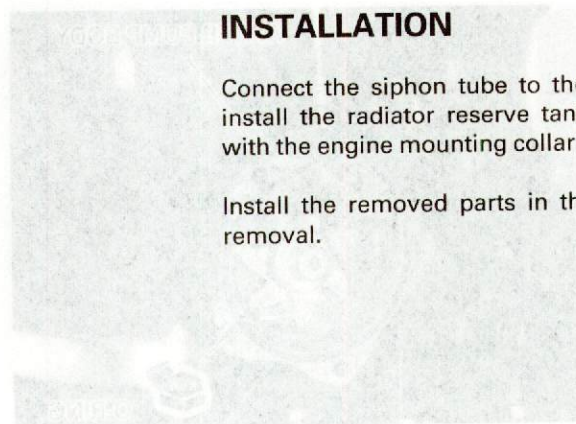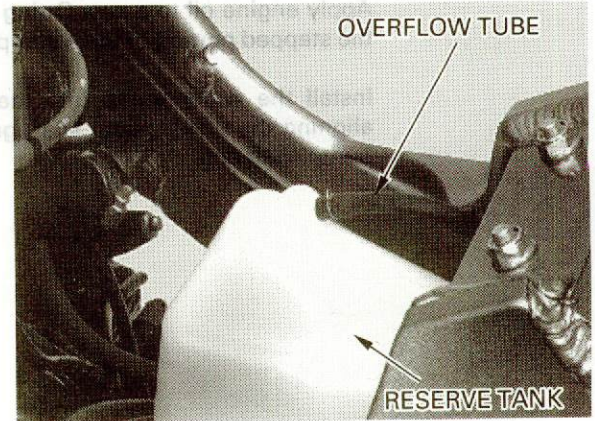

INSTALLATION

Connect the siphon tube to the reserve tank and install the radiator reserve tank aligning its hook with the engine mounting collar.

Install the removed parts in the reverse order of removal.

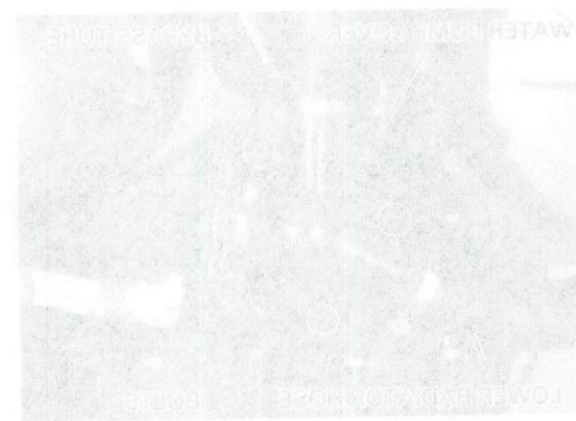

Install the water pump cover and tighten the four flange bolts to the specified torque.
TORQUE: 13 N·m (9.14 ft·lb) (9.14 ft·lb)
Connect the lower radiator hose and bypass tube. Then tighten the clamp screws.