


ALTERNATOR/STARTER CLUTCH

Hold the flywheel using the flywheel holder, then tighten the bolt to the specified torque.


TOOL:
Flywheel holder

07725-0040000
(Equivalent commercially available)

TORQUE: 103 N·m (10.5 kgf·m , 76 lbf·ft)

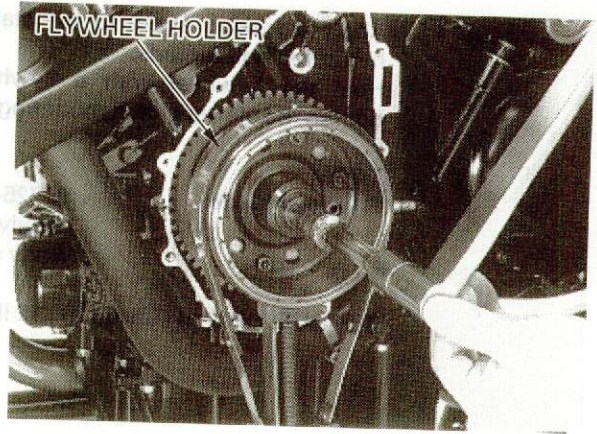


Apply oil to the starter idle gear and gear shaft, and install them.

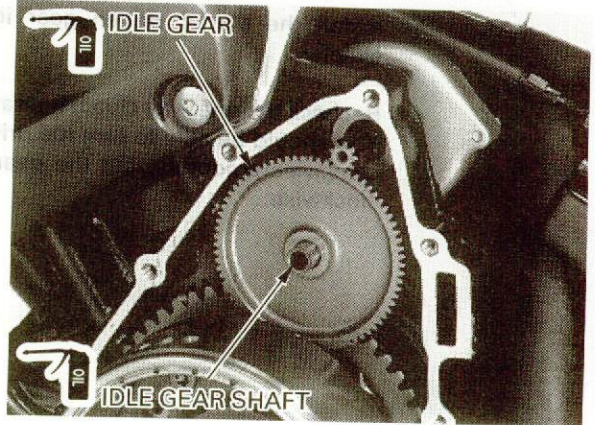

ALTERNATOR COVER INSTALLATION

Apply sealant to the mating surface of the crankcase as shown.

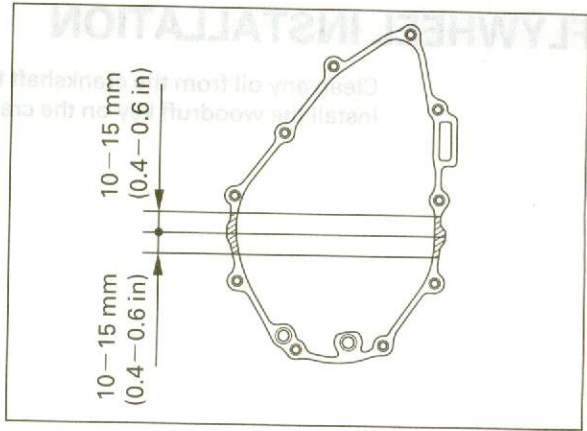

Install the dowel pin and new gasket.

