



FRONT WHEEL/SUSPENSION/STEERING


Install the stopper ring into the fork slider groove securely.

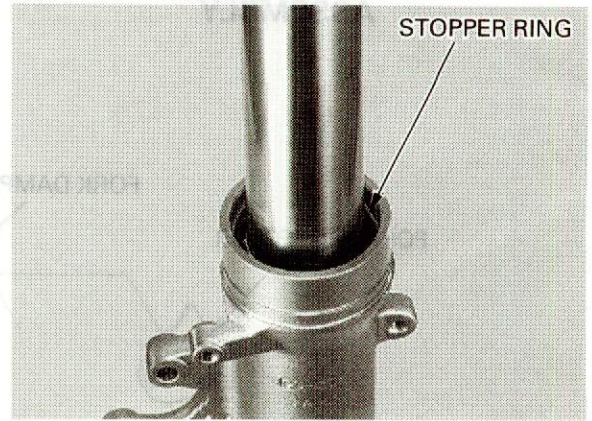

Install the dust seal.

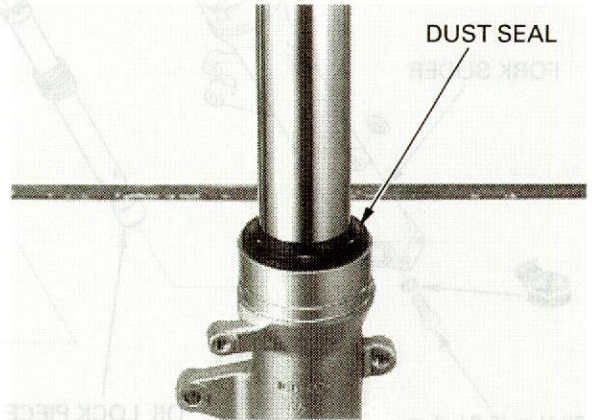

Install the oil lock piece onto the end of the fork damper.
Install the fork damper assembly into the fork tube.

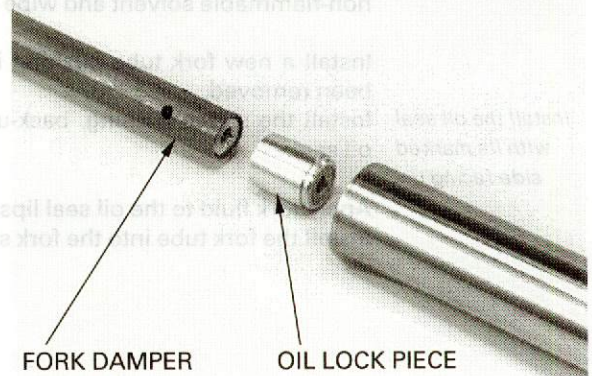

Hold the fork slider in a vise with soft jaws or a shop towel.
Apply a locking agent to the fork socket bolt threads.
Install the socket bolt with a new sealing washer, then tighten the bolt to the specified torque.

NOTE:

If the fork damper turns together with the socket bolt, temporarily install the fork spring, spring collar and fork bolt.



TORQUE: 20 N·m (2.0 kgf·m , 14 lbf·ft)