


Front brake line

Connect a commercially available brake bleeder to the front brake caliper outer bleed valve.

Loosen the bleed valve and pump the brake bleeder.

Stop pumping the bleeder when no more fluid flows out of the bleed valve.

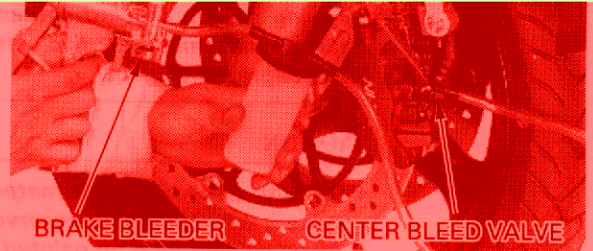

Connect a commercially available brake bleeder to the rear brake caliper outer bleed valve.

Loosen the bleed valve and pump the brake bleeder.

Stop pumping the bleeder when no more fluid flows out of the bleed valve.



Connect a commercially available brake bleeder to the rear brake caliper center bleed valve.

Loosen the bleed valve and pump the brake bleeder.

Stop pumping the bleeder when no more fluid flows out of the bleed valve.

