


# HYDRAULIC BRAKE

Install the pad pin plug rubber.

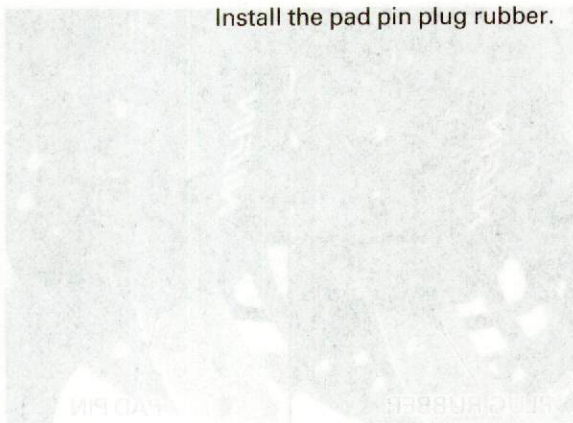

## REAR BRAKE PAD REPLACEMENT

### ▲WARNING

*After the brake pad replacement, check the brake operation by applying the brake lever and pedal.*


*Always replace the brake pads in pairs to assure even disc pressure.*

Push the caliper pistons all the way in by pushing the caliper body inward to allow installation of new brake pads.

### NOTE:

Check the brake fluid level in the brake master cylinder reservoir as this operation causes the level to rise.

Remove the pad pin plug rubber and loosen the pad pin.

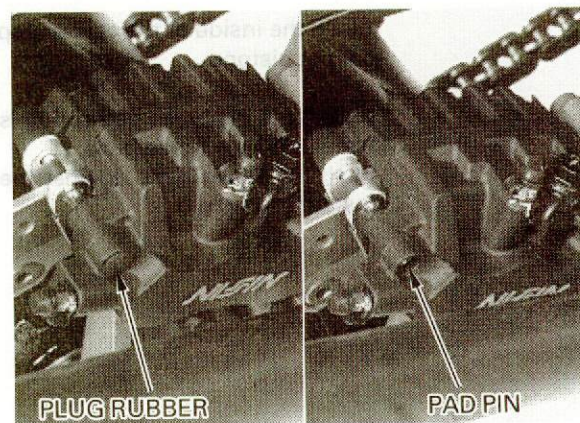

Remove the pad pin and brake pads.

