

## REAR BRAKE CALIPER

### REMOVAL

Drain the pedal line brake hydraulic system (page 15-5).

Loosen the oil bolts, then remove the rear wheel (page 14-3).

Remove the oil bolts, sealing washers and brake hose eyelet joints.

#### CAUTION:

*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

### DISASSEMBLY

Remove the rear brake pads (page 15-14).

Remove the caliper bracket from the caliper body.

Remove the brake pad spring from the caliper body.  
Remove the brake pad retainer from the caliper bracket.

Remove the bolts and caliper body B.

