

# TROUBLESHOOTING

## SPEED SENSOR/SPEEDOMETER

The odometer/trip meter operate normally, but the speedometer does not operate

- Faulty speedometer

The speedometer operate normally, but the odometer/trip meter does not operate

- Faulty odometer/trip meter

The speedometer operate is abnormal

- Check for the following before diagnosing.
  - Blown main or sub fuses
  - Loose or corroded terminals of the connectors
  - Discharged battery

