

POSITION LIGHT

BULB REPLACEMENT


Remove the headlight unit (page 19-4).

Pull out the position light bulb socket.



Remove the bulb from the socket, replace it with a new one.


Install the position light bulb socket and headlight unit in the reverse order of removal.

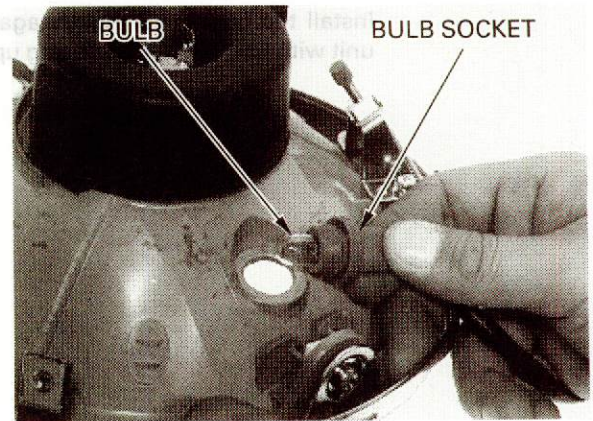

TURN SIGNAL

BULB REPLACEMENT

Remove the screw and turn signal lens.

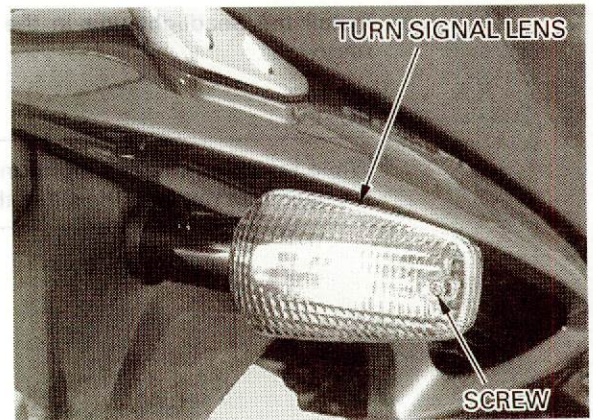

While pushing in, turn the bulb counterclockwise to remove it and replace with a new one.

Install the turn signal lens in the reverse order of removal.

