

LIGHTS/METERS/SWITCHES

1. Short the black and gray terminals of the turn signal relay connector with a jumper wire. Start the engine and check the turn signal light by turning the switch ON.

Light comes on

Light does not come on

- Broken wire harness



2. Check for continuity between the green terminal of the relay connector and ground.

Continuity

No continuity

- Broken ground wire

- Faulty turn signal relay.
- Poor connection of the connector.

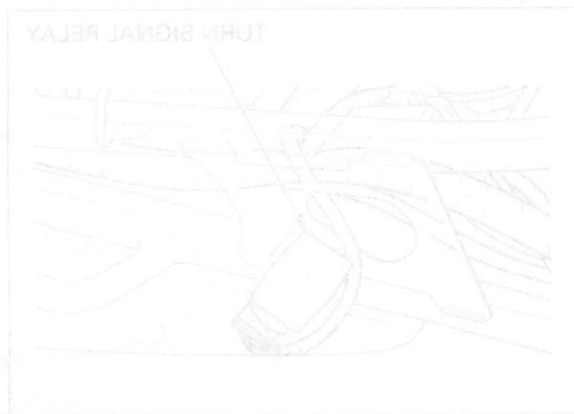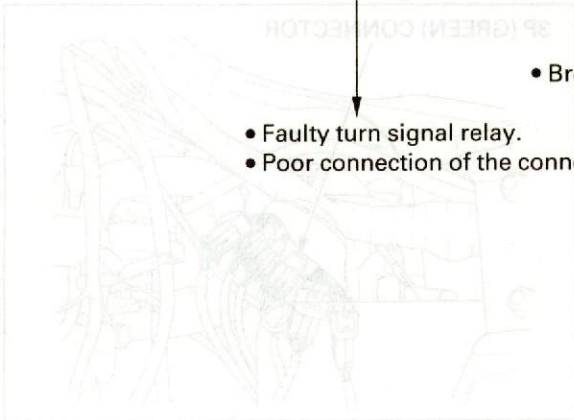

HORN

Disconnect the wire connectors from the horn.
Connect the 12 V battery to the horn terminal directly.
The horn is normal if it sounds when the 12 V battery is connected across the horn terminals.

TURN SIGNAL RELAY

INSPECTION

Check the following:

- Battery condition
- Burned out bulb or non-specified wattage
- Burned fuse
- Ignition switch and turn signal switch function
- Loose connectors

If the above items are all normal, check the following:

Disconnect the turn signal connectors from the relay.