

INDEX

AIR CLEANER	3-5	FLYWHEEL INSTALLATION	10-7
AIR CLEANER HOUSING	5-60	FLYWHEEL REMOVAL	10-3
ALTERNATOR/CHARGING COIL	16-7	FOOTPEG	2-16
ALTERNATOR COVER INSTALLATION	10-8	FORK	13-17
ALTERNATOR COVER REMOVAL	10-2	FRONT BRAKE CALIPER	15-29
BANK ANGLE SENSOR	5-81	FRONT FENDER	2-5
BALLANCER	12-14	FRONT MASTER CYLINDER	15-16
BATTERY	16-5	FRONT WHEEL	13-10
BODY PANEL LOCATIONS	2-0	FUEL CUT RELAY	5-55
BRAKE FLUID	3-25	FUEL LINE	3-4
BRAKE FLUID REPLACEMENT/AIR BLEEDING	15-5	FUEL LINE INSPECTION	5-51
BRAKE LIGHT SWITCH	3-27	FUEL PUMP	5-54
BRAKE LIGHT SWITCH	19-21	FUEL RESERVE SENSOR	19-18
BRAKE PAD WEAR	3-25	FUEL TANK	5-56
BRAKE PAD/DISC	15-12	GEARSHIFT LINKAGE	9-12
BRAKE PEDAL	15-39	GENERAL SAFETY	1-1
BRAKE SYSTEM	3-26	HANDLEBAR SWITCHES	19-20
CABLE & HARNESS ROUTING	1-24	HANDLEBARS	13-3
CAMSHAFT INSTALLATION	8-23	HEADLIGHT	19-4
CAMSHAFT REMOVAL	8-7	HEADLIGHT AIM	3-28
CAM PULSE GENERATOR	5-78	HORN	19-23
CAM CHAIN TENSIONER	8-30	IAT SENSOR	5-77
CHARGING SYSTEM INSPECTION	16-6	IGNITION COIL	17-6
CHOKE OPERATION	3-5	IGNITION PULSE GENERATOR	17-7
CLUTCH	9-3	IGNITION SYSTEM INSPECTION	17-4
CLUTCH SWITCH	19-21	IGNITION SWITCH	19-19
COOLANT REPLACEMENT	6-4	IGNITION TIMING	17-10
COOLANT TEMPERATURE GAUGE/SENSOR	19-15	IMMOBILIZER INDICATOR	20-10
COOLING FAN MOTOR SWITCH	19-16	IMMOBILIZER RECEIVER	20-11
COOLING SYSTEM	3-19	INJECTOR	5-68
COMBINATION METER	19-8	KEY REGISTRATION PROCEDURE	20-2
CRANKCASE COMBINATION	11-12	KNOCK SENSOR	5-83
CRANKCASE SEPARATION	11-3	LUBRICATION SYSTEM DIAGRAM	4-0
CRANKSHAFT	12-3	LUBRICATION & SEAL POINTS	1-20
CYLINDER COMPRESSION TEST	8-4	MAINTENANCE SCHEDULE	3-3
CYLINDER HEAD ASSEMBLY	8-20	MAP SENSOR	5-77
CYLINDER HEAD COVER ASSEMBLY	8-27	MODEL IDENTIFICATION	1-3
CYLINDER HEAD COVER DISASSEMBLY	8-6	MUFFLER/EXHAUST PIPE	2-10
CYLINDER HEAD COVER INSTALLATION	8-27	NEUTRAL SWITCH	19-21
CYLINDER HEAD COVER REMOVAL	8-5	NUTS, BOLTS, FASTENERS	3-30
CYLINDER HEAD DISASSEMBLY	8-13	OIL COOLER	4-12
CYLINDER HEAD INSPECTION	8-14	OIL PRESSURE SWITCH	19-16
CYLINDER HEAD INSTALLATION	8-21	OIL PRESSURE INSPECTION	4-3
CYLINDER HEAD REMOVAL	8-11	OIL PUMP	4-7
DELAY VALVE	15-28	OIL STRAINER/PRESSURE RELIEF VALVE	4-4
DIAGNOSTIC CODE INDICATION	20-5	O ₂ SENSOR	5-85
DIODE	18-11	PAIR CONTROL SOLENOID VALVE	5-84
DRIVE CHAIN	3-20	PGM-FI (Programmed Fuel Injection) SYSTEM	5-6
DRIVE CHAIN SLIDER	3-24	PGM-FI SELF-DIAGNOSIS MALFUNCTION	5-10
ECT SENSOR	5-78	INDICATOR FAILURE CODES	5-10
ECM (ENGINE CONTROL MODULE)	5-83	PISTON/CONNECTING ROD	11-4
ECM (ENGINE CONTROL MODULE)	20-10	POSITION LIGHT	19-5
ENGINE IDLE SPEED	3-18	PROPORTIONAL CONTROL VALVE	15-28
ENGINE INSTALLATION	7-6	RADIATOR	6-8
ENGINE OIL/OIL FILTER	3-15	RADIATOR COOLANT	3-18
ENGINE REMOVAL	7-2	RADIATOR GRILL	2-4
ENGINE STOP RELAY	5-82	RADIATOR RESERVE TANK	6-16
EMISSION CONTROL SYSTEMS	1-36	REAR BRAKE CALIPER	15-35