

REAR COWL	2-2	TACHOMETER	19-14
REAR FENDER	2-5	TAIL/BRAKE LIGHT	19-7
REAR MASTER CYLINDER	15-23	THERMOSTAT	6-5
REAR WHEEL	14-3	THROTTLE BODY	5-63
REGULATOR/RECTIFIER	16-8	THROTTLE OPERATION	3-4
REQUIRED PARTS FOR PROBLEM	20-12	TORQUE VALUES	1-13
RIGHT CRANKCASE COVER INSTALLATION	9-17	TOOLS	1-18
RIGHT CRANKCASE COVER REMOVAL	9-3	TP SENSOR	5-80
SEAT	2-2	TRANSMISSION	12-9
SEAT RAIL	2-8	TROUBLESHOOTING	
SERVICE RULES	1-2	(ALTERNATOR/STARTER CLUTCH)	10-1
SECONDARY AIR SUPPLY SYSTEM	3-19	(BATTERY/CHARGING SYSTEM)	16-3
SECONDARY MASTER CYLINDER	15-20	(CLUTCH/GEARSHIFT LINKAGE)	9-2
SERVICE INFORMATION		(COOLING SYSTEM)	6-2
(ALTERNATOR/STARTER CLUTCH)	10-1	(CRANKCASE/PISTON/CYLINDER)	11-2
(BATTERY/CHARGING SYSTEM)	16-1	(CRANKSHAFT/TRANSMISSION)	12-2
(CLUTCH/GEARSHIFT LINKAGE)	9-1	(CYLINDER HEAD/VALVES)	8-3
(COOLING SYSTEM)	6-1	(ELECTRIC STARTER)	18-2
(CRANKCASE/PISTON/CYLINDER)	11-1	(ENGINE DOES NOT START OR IS HARD TO START)	22-1
(CRANKSHAFT/TRANSMISSION)	12-1	(ENGINE LACKS POWER)	22-2
(CYLINDER HEAD/VALVES)	8-1	(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
(ELECTRIC STARTER)	18-1	(FRONT WHEEL/SUSPENSION/STEERING)	13-2
(ENGINE REMOVAL/INSTALLATION)	7-1	(FUEL SYSTEM)	5-3
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1	(HYDRAULIC BRAKE)	15-4
(FRONT WHEEL/SUSPENSION/STEERING)	13-1	(IGNITION SYSTEM)	17-3
(FUEL SYSTEM)	5-1	(IMMOBILIZER SYSTEM (HISS) )	20-7
(HYDRAULIC BRAKE)	15-2	(LIGHTS/METERS/SWITCHES)	19-3
(IGNITION SYSTEM)	17-1	(LUBRICATION SYSTEM)	4-2
(IMMOBILIZER SYSTEM (HISS) )	20-1	(POOR HANDLING)	22-4
(LIGHTS/METERS/SWITCHES)	19-1	(POOR PERFORMANCE AT HIGH SPEED)	22-4
(LUBRICATION SYSTEM)	4-1	(POOR PERFORMANCE AT LOW AND IDLE SPEED)	23-3
(MAINTENANCE)	3-1	(REAR WHEEL/SUSPENSION)	14-2
(REAR WHEEL/SUSPENSION)	14-1	TURN SIGNAL	19-6
SHOCK ABSORBER	14-9	TURN SIGNAL RELAY	19-23
SIDE STAND	3-29	VALVE CLEARANCE	3-11
SIDE STAND SWITCH	19-22	VALVE GUIDE REPLACEMENT	8-16
SPARK PLUG	3-7	VALVE SEAT INSPECTION/REFACING	8-17
SPECIFICATIONS	1-4	WATER PUMP	6-13
SPEEDOMETER/VEHICLE SPEED SENSOR	19-12	WHEELS/TIRES	3-31
STARTER CLUTCH	10-5	WIRING DIAGRAM	21-1
STARTER MOTOR	18-4		
STARTER RELAY SWITCH	18-10		
STARTER VALVE	5-70		
STARTER VALVE SYNCHRONIZATION	5-75		
STATOR	10-2		
STEERING HEAD BEARINGS	3-31		
STEERING STEM	13-28		
SUSPENSION	3-29		
SWINGARM	14-12		
SYSTEM DIAGRAM			
(BATTERY/CHARGING SYSTEM)	16-0		
(ELECTRIC STARTER)	18-0		
(FUEL SYSTEM)	5-5		
(IGNITION SYSTEM)	17-0		
SYSTEM DIAGRAM			
(IMMOBILIZER SYSTEM (HISS) )	20-0		
SYSTEM LOCATION			
(FUEL SYSTEM)	5-4		
(LIGHTS/METERS/SWITCHES)	19-0		
SYSTEM FLOW PATTERN	6-0		
SYSTEM TESTING	6-3		