

# 3. MAINTENANCE

SERVICE INFORMATION	3-1	DRIVE CHAIN	3-17
MAINTENANCE SCHEDULE	3-3	DRIVE CHAIN SLIDER	3-22
FUEL LINE	3-4	BRAKE FLUID	3-22
THROTTLE OPERATION	3-4	BRAKE PAD WEAR	3-23
CARBURETOR CHOKE	3-5	BRAKE SYSTEM	3-23
AIR CLEANER	3-5	BRAKE LIGHT SWITCH	3-24
SPARK PLUG	3-5	HEADLIGHT AIM	3-24
VALVE CLEARANCE	3-7	CLUTCH SYSTEM	3-25
ENGINE OIL/OIL FILTER	3-12	SIDE STAND	3-25
CARBURETOR SYNCHRONIZATION	3-14	SUSPENSION	3-26
ENGINE IDLE SPEED	3-15	NUTS, BOLTS, FASTENERS	3-27
RADIATOR COOLANT	3-16	WHEELS/TIRES	3-27
COOLING SYSTEM	3-16	STEERING HEAD BEARINGS	3-28
SECONDARY AIR SUPPLY SYSTEM	3-17		

## SERVICE INFORMATION

### GENERAL

#### ▲WARNING

- Gasoline is extremely flammable and is explosive under certain conditions. Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause a fire or explosion.
- If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and lead to death. Run the engine in an open area or with an exhaust evacuation system in an enclosed area.

- Place the motorcycle on a level ground before starting any work.

### SPECIFICATIONS

ITEM		SPECIFICATIONS
Throttle grip free play		2–6 mm (1/16–1/4 in)
Spark plug		CR9EH–9 (NGK) U27FER9 (DENSO)
Spark plug gap		0.8–0.9 mm (0.03–0.04 in)
Valve clearance	IN	0.16 ± 0.03 mm (0.006 ± 0.001 in)
	EX	0.22 ± 0.03 mm (0.009 ± 0.001 in)