

ENGINE REMOVAL/INSTALLATION

Remove the rear upper engine hanger bolt/nut and distance collar.
Carefully lower the adjustable support, then remove the engine from the frame.




ENGINE INSTALLATION


NOTE:

- Note the direction of the hanger bolts.
- Use a floor jack or other adjustable support to carefully maneuver the engine into place.

Install the engine into the frame.

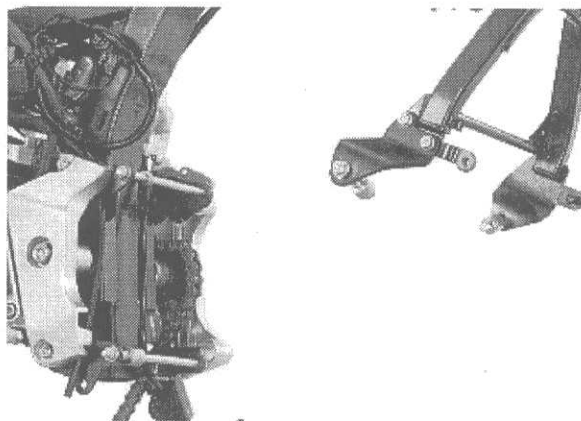

Install the rear upper engine hanger bolt/nut and distance collar.

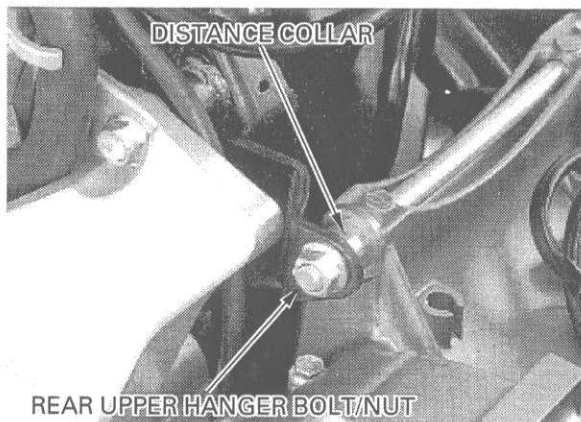

Install the rear lower engine hanger bolt/nut and distance collar.

