


ALTERNATOR COVER REMOVAL

Remove the air cleaner housing (page 5-4).

Disconnect the alternator 3P (White) connector.




Release the alternator wire from the wire clamp.

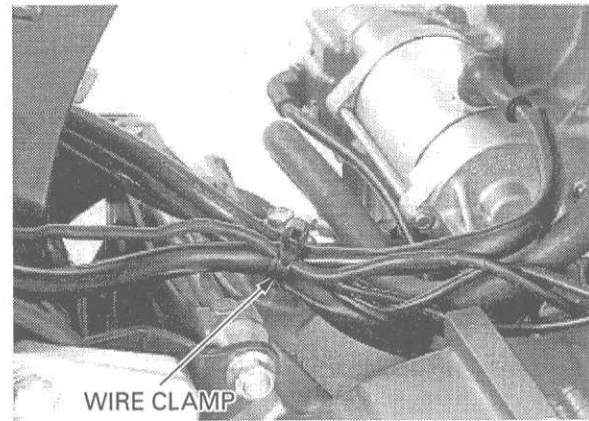

Remove the alternator cover SH bolts and alternator cover.

CAUTION:

The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal.

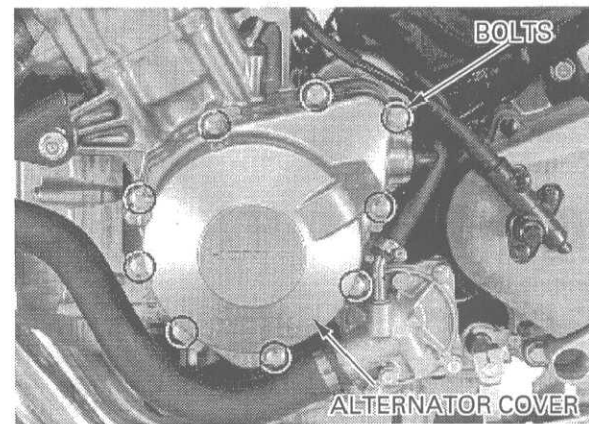

NOTE:

The engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.

Remove the gasket and dowel pin.

