


REAR WHEEL

REMOVAL

Loosen the rear axle nut.
Loosen the lock nut and drive chain adjusting nut and make a drive chain slack fully.

Support the motorcycle securely using a hoist or equivalent.

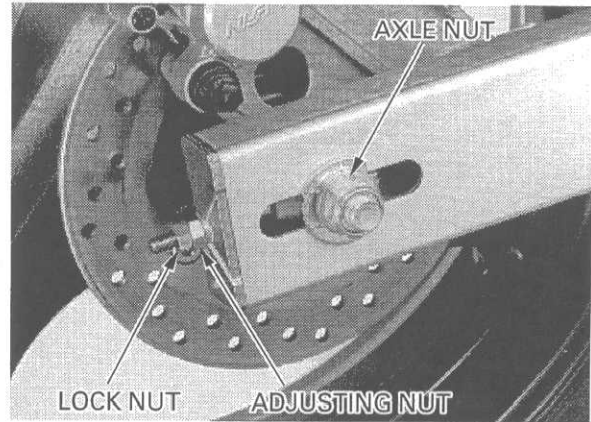


Remove the axle nut, washer and rear axle washer.



Do not operate the brake pedal after the rear wheel is removed.

Derail the drive chain from the driven sprocket.
Remove the axle and rear axle washer from the left side and remove the rear wheel.

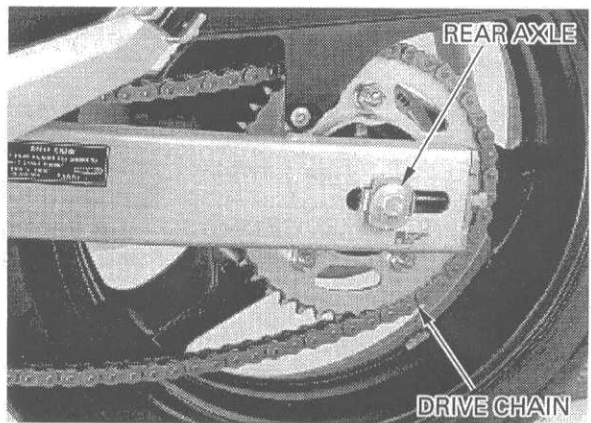

Remove the side collars.

