


BRAKE PEDAL

REMOVAL


Remove the right footpeg holder mounting bolts.

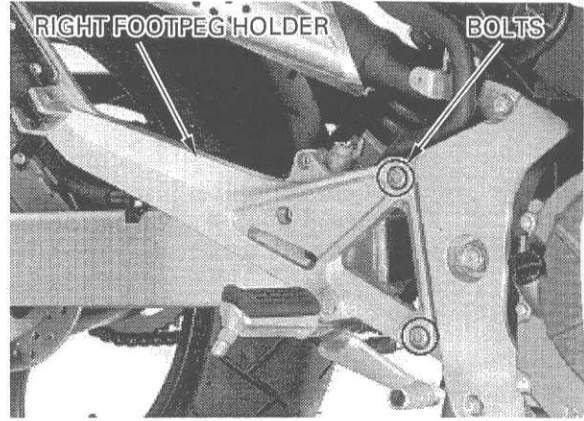

Remove and discard the brake pedal joint cotter pin. Remove the joint pin.

Unhook the return spring and remove the brake light switch from the step holder. Unhook the brake pedal return spring.

Remove the snap ring, washer and brake pedal.

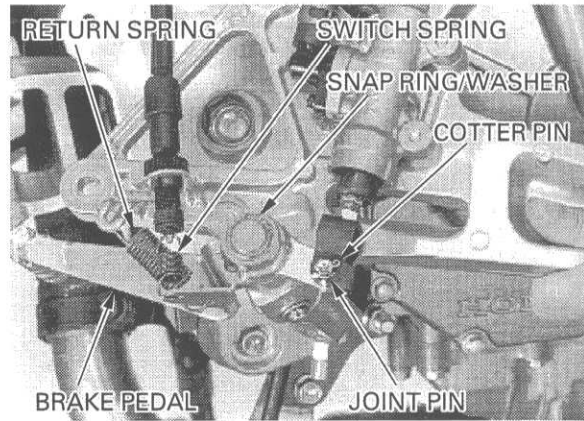

INSTALLATION

