


Pulse Generator Removal/Installation

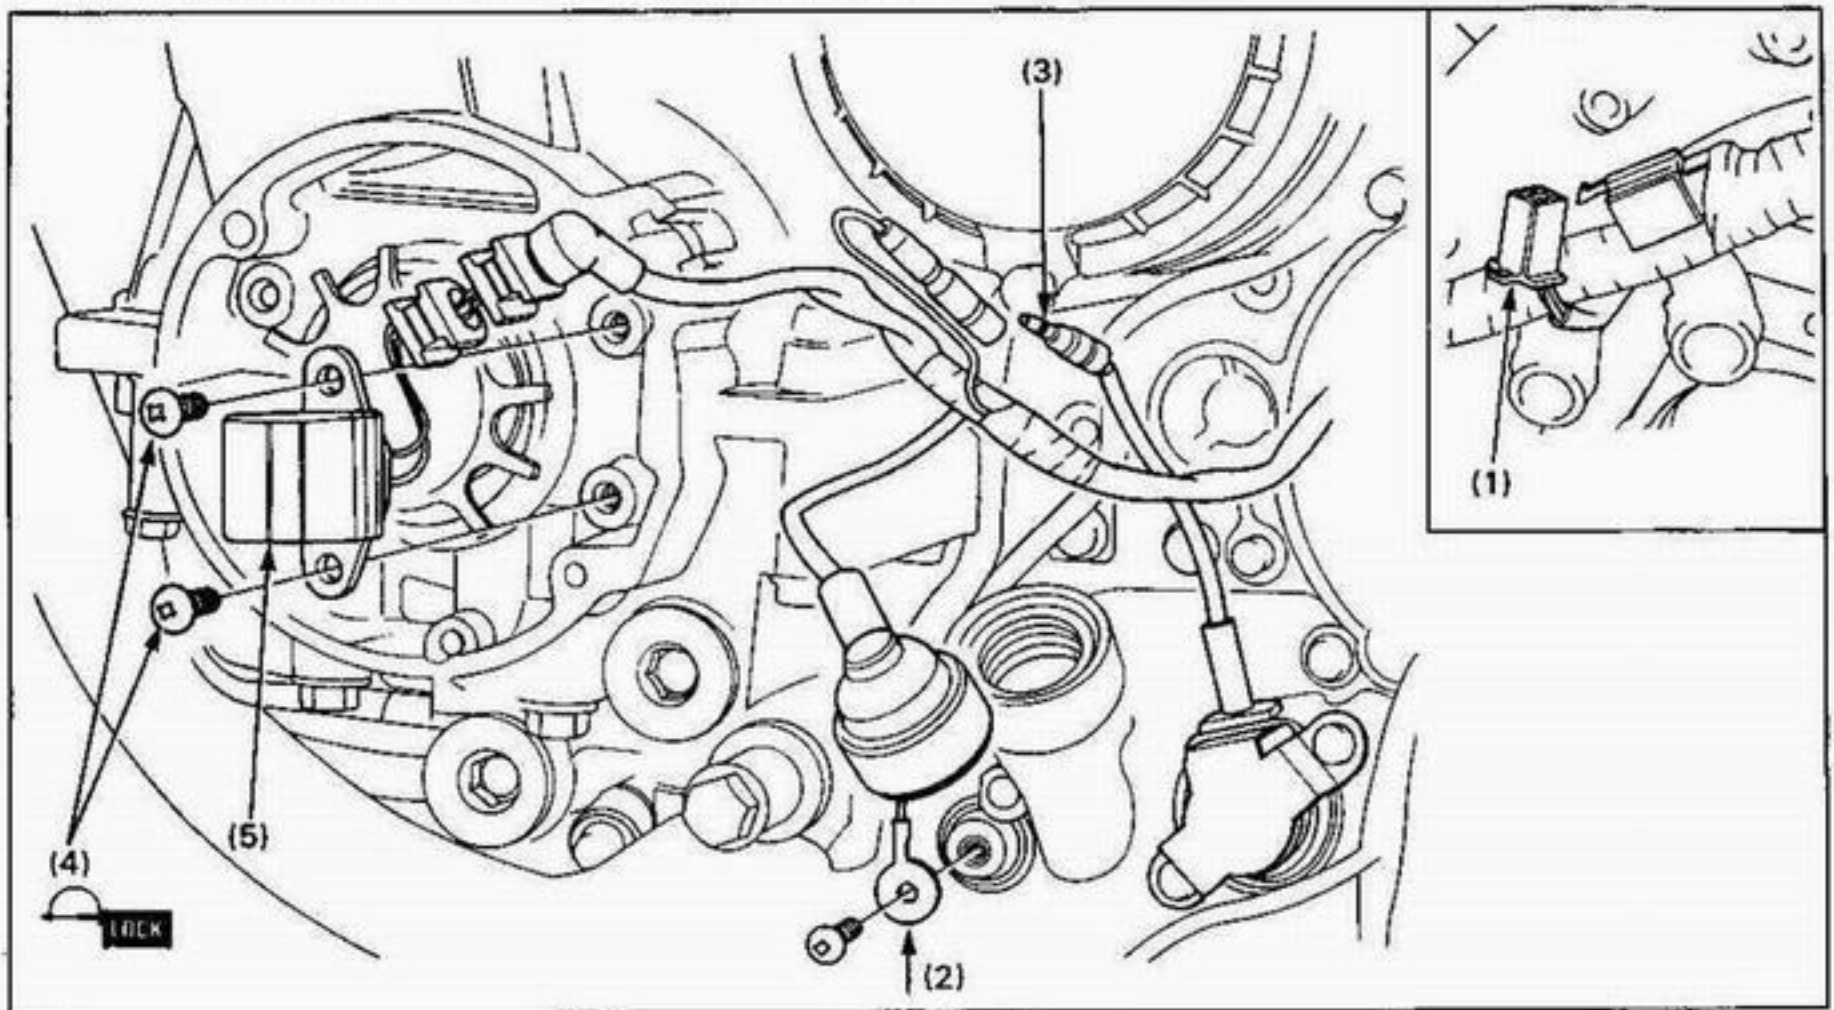

CAUTION

- Be careful not to damage the wire harnesses by pinching them between the sprocket cover and engine.

NOTE

- Route the wire harnesses properly (page 1-25).

Requisite Service

- Left crankcase cover removal/installation (page 14-10)
- Fuel tank removal/installation (page 2-3)
- Drive sprocket cover removal/installation (page 8-9)

| Procedure | | Qty | Remarks |
|----------------------|------------------------------|-----|--|
| Removal Order | | | Installation is in the reverse order of removal. |
| (1) | Pulse generator connector | 1 | |
| (2) | Oil pressure switch terminal | 1 | |
| (3) | Neutral switch connector | 1 | |
| (4) | Pulse generator screw | 2 | |
| (5) | Pulse generator | 1 | |