

# Index

Air Cleaner .....	3-5	Oil Cooler Removal/Installation .....	4-5
Case Removal/Installation .....	5-3	Oil Pressure Check .....	4-6
Alternator .....	13-7	Oil Pump Disassembly/Assembly .....	4-4
Removal/Installation .....	13-8	Removal/Installation .....	4-3
Shaft Disassembly/Assembly .....	9-12	Pilot Screw Adjustment .....	5-12
Battery Removal/Installation .....	13-4	Poor Handling .....	18-4
Brake Pedal Removal/Installation .....	12-14	Poor Performance At High Speed .....	18-3
Cable & Harness Routing .....	1-21	Poor Performance At Low And Idle Speeds .....	18-3
Camshaft Removal/Installation .....	7-2	Pulse Generator .....	14-8
Carburetor Combination .....	5-10	Pulse Generator Removal/Installation .....	14-9
Disassembly/Assembly .....	5-8	Rear Brake Caliper Disassembly/Assembly .....	12-11
Removal/Installation .....	5-4	Removal/Installation .....	12-10
Separation .....	5-6	Rear Brake Pad Replacement .....	12-3
synchronization .....	3-5	Rear Master Cylinder Disassembly/Assembly .....	12-7
Charging System Inspection .....	13-5	Removal/Installation .....	12-6
Clutch Cover Removal/Installation .....	8-2	Rear Fairing Removal/Installation .....	2-3
Clutch Installation .....	8-6	Rear Fender Removal/Installation .....	2-4
Removal .....	8-4	Rear Wheel Disassembly/Assembly .....	11-4
Countershaft Bearing Cover		Removal/Installation .....	11-2
Removal/Installation .....	9-2	Regulator/Rectifier .....	13-6
Crankcase Assembly .....	9-18	Seat Removal/Installation .....	2-3
Separation .....	9-4	Service Access Guide .....	3-2
Crankshaft Bearing Replacement .....	9-14	Service Information	
Crankshaft, Connecting Rod Installation .....	9-16	Brake System .....	12-1
Removal .....	9-10	Charging System/Alternator .....	13-1
Cylinder Head Disassembly/Assembly .....	7-10	Electric Starter/Starter Clutch .....	15-1
Removal/Installation .....	7-8	Front Wheel/Suspension/Steering .....	10-1
Cylinder, Piston Removal/Installation .....	7-12	Rear Wheel/Suspension .....	11-1
Drive Chain Slider .....	3-6	Clutch/Gearshift Linkage .....	8-1
Drive Sprocket Cover Removal/Installation .....	8-9	Crankshaft/Transmission .....	9-1
Engine Does Not Start Or Is Hard To Start .....	18-1	Cylinder Head/Cylinder/Piston .....	7-1
Engine Lacks Power .....	18-2	Engine Removal/Installation .....	6-1
Engine Removal/Installation .....	6-2	Frame/Body Panels/Exhaust System .....	2-1
Exhaust System Removal/Installation .....	2-6	Fuel System .....	5-1
Fork Assembly .....	10-12	Lights/Meters/Switches .....	16-1
Disassembly .....	10-10	Lubrication System .....	4-1
Removal/Installation .....	10-8	Maintenance .....	3-1
Front Brake Pad Replacement .....	12-2	Ignition System .....	14-1
Front Brake Hose Replacement .....	12-12	Shock Absorber Disassembly/Assembly .....	11-7
Front Brake Caliper Disassembly/Assembly .....	12-9	Removal/Installation .....	11-6
Removal/Installation .....	12-8	Side Cover Removal/Installation .....	2-2
Front Master Cylinder Disassembly/Assembly .....	12-5	Side Stand Switch .....	16-8
Removal/Installation .....	12-4	Specification .....	1-4
Front Wheel Disassembly/Assembly .....	10-6	Starter Clutch Disassembly/Assembly .....	15-8
Removal/Installation .....	10-4	Starter Motor Disassembly/Assembly .....	15-6
Fuel Tank Removal/Installation .....	2-3	Removal/Installation .....	15-5
Gearshift Linkage Removal/Installation .....	8-10	Steering Stem Removal/Installation .....	10-14
General Safety .....	1-1	Swingarm Disassembly/Assembly .....	11-11
Handlebar Removal/Installation .....	10-2	Removal/Installation .....	11-10
Headlight Removal/Installation .....	16-3	System Location	
Hydraulic Tappet .....	18-4	Charging System/Alternator .....	13-2
Ignition Coil .....	14-7	Electric Starter/Starter Clutch .....	15-2
Ignition Swich Removal/Installation .....	16-10	Ignition System .....	14-2
Ignitcon System Inspection .....	14-6	Lights/Meters/Switches .....	16-2
Ignition Timing .....	14-9	Tachometer Inspection .....	16-8
Lubrication & Seal Point .....	1-19	Tail/Brake Light .....	16-4
Lubrication System Diagram .....	4-2	Tools .....	1-17
Maintenance Schedule .....	3-4	Torque Values .....	1-14
Meter Disassembly/Assembly .....	16-6	Transmission Disassembly/Assembly .....	9-8
Removal/Installation .....	16-5	Removal/Installation .....	9-6
Model Identification .....	1-3	Troubleshooting	
Neutral Switch .....	16-9	Brake System .....	12-1
		Charging System/Alternator .....	13-3