

MUFFLER/EXHAUST PIPE

MUFFLER

REMOVAL


Remove the rear cowl (page 2-3).

Remove the socket bolt and remove the front muffler protector by pulling it forward.

Loosen the muffler band bolt.

Remove the muffler mounting bolt and washer.

Remove the muffler.

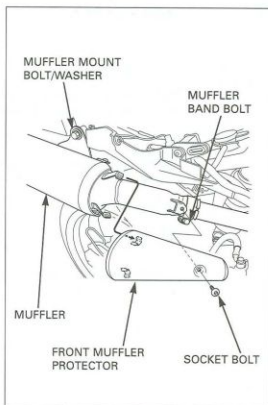

DISASSEMBLY/ASSEMBLY

