


### FUEL LINE

Remove the side covers (page 2-2).


Loosen the fuel tank mounting bolt/nut.

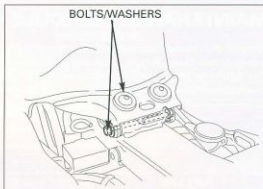

Move the fuel tank back.


*Do not remove  
the maintenance  
wire.*

Open and support the front end of the fuel tank using a suitable support as shown.

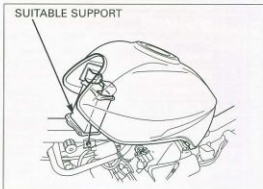

Check the fuel lines for deterioration, damage or leakage. Replace the fuel line if necessary.

Install the fuel tank in the reverse order of removal.

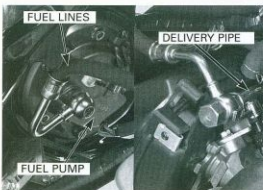

### THROTTLE OPERATION

Check for smooth throttle grip full opening and automatic full closing in all steering positions.

Check the throttle cables and replace them if they are deteriorated, kinked or damaged.

Lubricate the throttle cables, if throttle operation is not smooth.

Measure the free play at the throttle grip flange.

**FREE PLAY:** 2 – 4 mm (1/16 – 1/8 in)

