

 
Measure the voltage at the TP sensor terminals of the wire harness side.



Connection: Red/Yellow (+) - Green/Orange (-)
Standard: 4.75 - 5.25 V

Voltage exists

Turn the ignition switch OFF.
Disconnect the ECM 22P connectors.



ECM

Check for continuity between the TP sensor connector terminal of the wire harness side and ground.



Connection: Red/Yellow (+) - Ground (-)
Standard: No continuity

No continuity

Out of range

- Open or short circuit in Green/Orange wire
- Loose or poor contact on the ECM connectors

Continuity

- Short circuit in Red/Yellow wire