


Remove the fuel tube sealing nut.
Install the special nut (Honda Genuine part) and attach the fuel pressure gauge.

Special nut: Part No. 90201-90A-003

TOOL:

Fuel pressure gauge 07406-0040002
or
07406-0040003

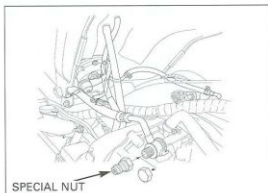

Connect the battery negative cable.
Start the engine.
Read the fuel pressure at idle speed.


IDLE SPEED: $1,200 \pm 100 \text{ min}^{-1}$ (rpm)
STANDARD: 343 kPa (3.5 kgf/cm², 50 psi)

If the fuel pressure is higher than specified, inspect the following:

- Pinched or clogged fuel return hose
- Pressure regulator
- Fuel pump (page 5-47)

If the fuel pressure is lower than specified, inspect the following:


- Fuel line leaking
- Clogged fuel filter
- Pressure regulator
- Fuel pump (page 5-47)

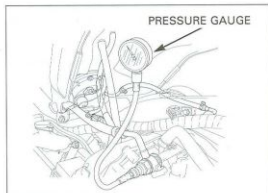

Always replace the sealing washer when the fuel rail sealing nut is removed or loosened.

After inspection, remove the fuel pressure gauge and reinstall and tighten the fuel hose sealing nut using the new sealing washer.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

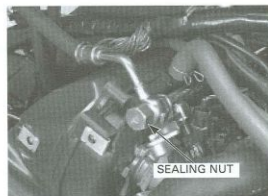

Connect the pressure regulator vacuum tube.

Install the removed parts in the reverse order of removal.

