


REMOVAL


Drain the coolant (page 6-4).

Disconnect the lower radiator hose and bypass hose from the water pump cover.

Remove the bolts and water pump cover.

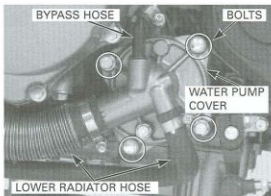

Remove the O-ring from the water pump body. Disconnect the water pump-to-water joint hose and oil cooler water hose from the water pump body.

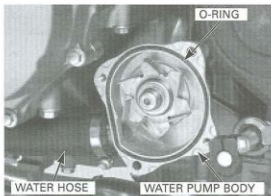

Remove the water pump body from the crankcase.

