


RIGHT CRANKCASE COVER REMOVAL


Drain the engine oil (page 3-15).

Remove the bolts and clutch cable guide, then disconnect the clutch cable end from the clutch lifter lever.

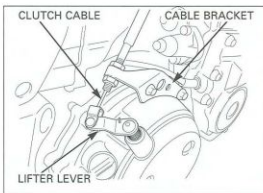

Remove the right crankcase cover SH bolts and clutch cable guide.

The lifter arm spindle is engaged with the clutch lifter piece inside the right crankcase cover.

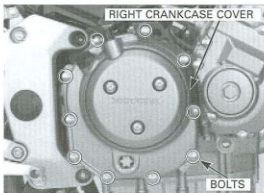

Remove the right crankcase cover while turning the clutch lifter arm counterclockwise to disengage the lifter arm spindle from the lifter piece. Remove the two dowel pins and gasket.

Clean the right crankcase cover mating surfaces.

