


Remove the shock absorber lower mounting bolt/nut.



Remove the shock absorber upper mounting bolt/nut and the shock absorber.

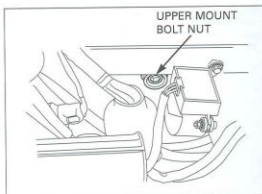

INSPECTION

Check the damper unit, reservoir hose and reservoir for leakage or other damage.
Check the upper joint bushing for wear or damage.

Inspect all the other parts for wear or damage.
Replace the shock absorber assembly if necessary.



NEEDLE BEARING REPLACEMENT

Remove the pivot collar and dust seals.

