

HYDRAULIC BRAKE

If a brake bleeder is not available, use the following procedure.

Pump up the system pressure with the lever or pedal until lever or pedal resistance is felt.

Connect a bleed hose to the bleed valve and bleed the system as follows:

1. Squeeze the brake lever or depress the brake pedal, open the bleed valve 1/2 turn and then close it.
2. Release the brake lever or pedal until the bleed valve has been closed.


Do not release the brake lever or pedal until the bleed valve has been closed.

Repeat steps 1 and 2 until bubbles cease to appear in the fluid coming out of the bleed valve.


Tighten the bleed valve.

TORQUE: 6 N·m (0.6 kgf·m, 4.3 lbf·ft)

Fill the fluid reservoir to the upper level.

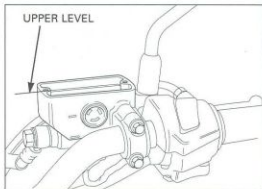

Reinstall the diaphragm and diaphragm plate.

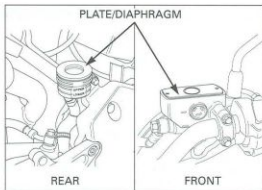

On the front brake, install the reservoir cap, and tighten the screws to the specified torque.

TORQUE: 2 N·m (0.2 kgf·m, 1.4 lbf·ft)

On the rear brake, install the reservoir cap securely,

