

HYDRAULIC BRAKE

INSTALLATION

Install the wheel (page 14-9).

Install the brake caliper/bracket assembly onto the guide of the swingarm (page 14-10).

Install and tighten the caliper bracket bolt to the specified torque.


TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Install the brake hose eyelet to the caliper body with two new sealing washers and oil bolt.

Push the brake hose eyelet to the stopper on the caliper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)


Fill and bleed the rear brake hydraulic system (page 15-4).

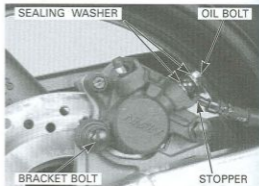

BRAKE PEDAL

REMOVAL

Remove the footpeg bracket mounting bolts and bracket assembly from the frame.

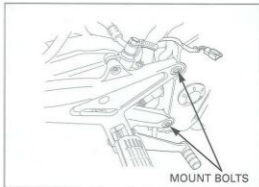

Remove and discard the brake pedal joint cotter pin. Remove the joint pin.

Unhook the return spring and remove the brake light switch from the step holder. Unhook the brake pedal return spring.

Remove the snap ring and thrust washer. Remove the brake pedal from the pivot.

