


LICENSE LIGHT

BULB REPLACEMENT


Remove the screws and license light lens.

Align the tail/brake light unit tabs with the bracket holes.

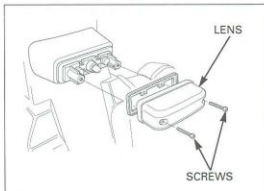

Remove the license light bulb and replace with a new one.

Install the tail/brake light lens in the reverse order of removal.

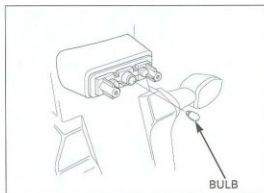


COMBINATION METER

REMOVAL

Remove the headlight case (page 19-5).

Disconnect the combination meter 9P connectors.

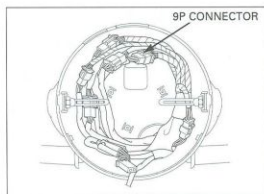

Remove the combination meter mounting nuts and combination meter.

