


Check that the O-ring is in good condition, replace if necessary.

Apply grease to the timing hole cap threads. Tighten the timing hole cap to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

Install the removed parts in the reverse order of removal.

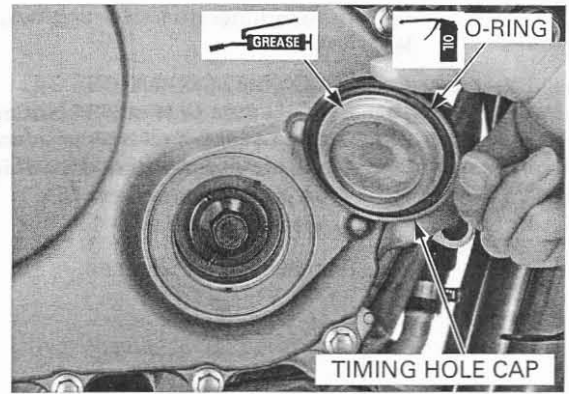


ENGINE OIL/OIL FILTER

OIL LEVEL INSPECTION

Start the engine and let it idle for 3 – 5 minutes. Stop the engine and wait 2 – 3 minutes. Hold the motorcycle in an upright position. Check the oil level through the inspection window.



If the level is below the lower level line, remove the oil filler cap and fill the crankcase with the recommended oil up to the upper level line as follows:

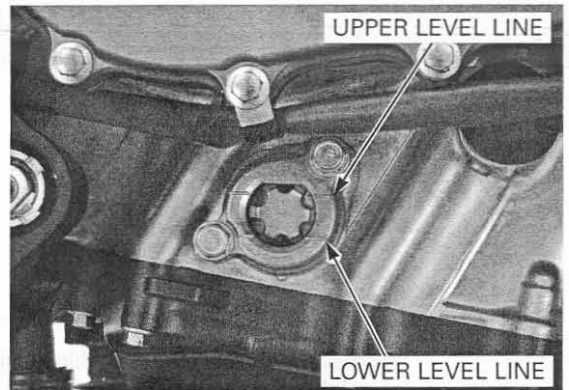

Remove the oil filler cap.

