

## FUEL SYSTEM (Programmed Fuel Injection)

### TORQUE VALUES

ECT (Engine Coolant Temperature)/thermo sensor	23 N·m (2.3 kgf·m, 17 lbf-ft)	
Throttle body insulator band screw	See page 1-15	
Service check bolt	12 N·m (1.2 kgf·m, 9 lbf-ft)	
IAC valve lock nut	1.8 N·m (0.18 kgf·m, 1.3 lbf-ft)	
IAC valve synchronization plate screw	0.9 N·m (0.09 kgf·m, 0.7 lbf-ft)	
Fuel pipe mounting bolt	9.8 N·m (1.0 kgf·m, 7 lbf-ft)	
IAC thermal valve link plate screw	0.9 N·m (0.09 kgf·m, 0.7 lbf-ft)	
IAC thermal valve mounting screw	4.9 N·m (0.5 kgf·m, 3.6 lbf-ft)	
Fuel filler cap socket bolt	1.8 N·m (0.18 kgf·m, 1.3 lbf-ft)	
Fuel feed hose banjo bolt (fuel tank side)	22 N·m (2.2 kgf·m, 16 lbf-ft)	Yellow paint
Fuel hose sealing nut (throttle body side)	22 N·m (2.2 kgf·m, 16 lbf-ft)	
Fuel pump flange nut	12 N·m (1.2 kgf·m, 9 lbf-ft)	See page 1-17 for tightening sequence
Fuel tank mounting bolt (front)	26 N·m (2.7 kgf·m, 20 lbf-ft)	
Fuel tank mounting bolt (rear)	9.8 N·m (1.0 kgf·m, 7 lbf-ft)	
Fuel rail joint hose SH bolt	9.8 N·m (1.0 kgf·m, 7 lbf-ft)	Yellow paint
Fuel rail joint hose sealing nut	22 N·m (2.2 kgf·m, 16 lbf-ft)	Yellow paint
Air cleaner housing/air funnel pan screw	4.4 N·m (0.45 kgf·m, 3.3 lbf-ft)	
Top air cleaner housing mounting screw	1.2 N·m (0.12 kgf·m, 0.9 lbf-ft)	
Middle air cleaner housing mounting screw	1.2 N·m (0.12 kgf·m, 0.9 lbf-ft)	
IAT sensor mounting screw	1.2 N·m (0.12 kgf·m, 0.9 lbf-ft)	
Air intake duct joint screw	2.5 N·m (0.25 kgf·m, 1.8 lbf-ft)	
Air intake duct flap screw	1.2 N·m (0.12 kgf·m, 0.9 lbf-ft)	
Secondary injector base mounting bolt	5.4 N·m (0.55 kgf·m, 4.0 lbf-ft)	
Bank angle sensor mounting screw	1.5 N·m (0.15 kgf·m, 1.1 lbf-ft)	