


FUEL TANK

REMOVAL


Remove the top shelter (page 3-16).

Remove the fuel tank front mounting bolts.

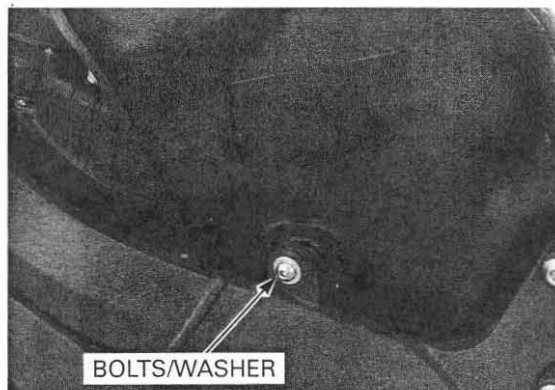

Disconnect the fuel tank drain hose from the hose joint as shown.

Lift the fuel tank as shown.

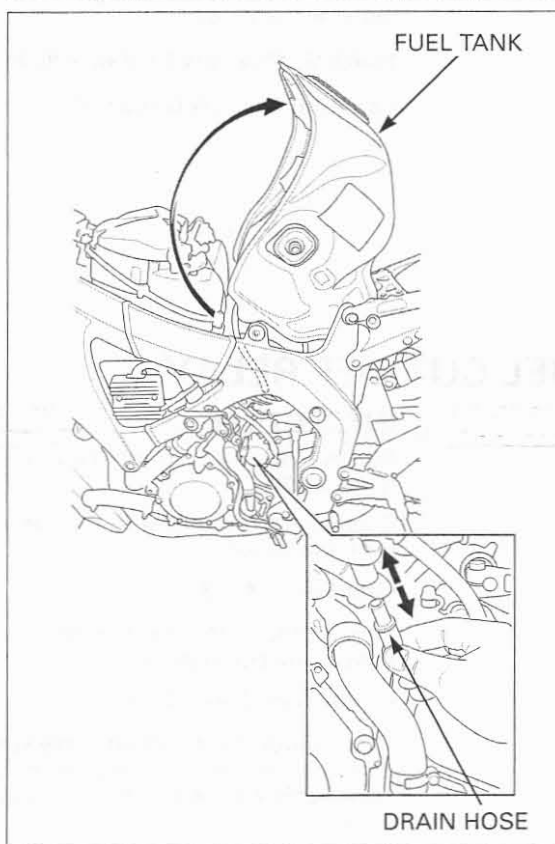

Support the fuel tank using a suitable support.

