


INSPECTION

Remove the EVAP purge control solenoid valve.


Check that air should not flow (A) to (B), only when the 12 V battery is connected to the EVAP purge control solenoid valve terminal.

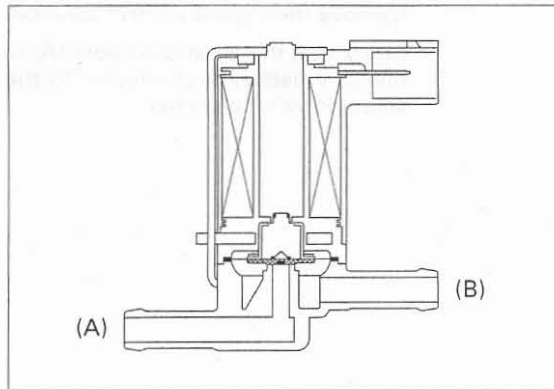

Check the resistance between the terminals of the EVAP purge control solenoid valve.

STANDARD: 30 – 34 Ω (20 °C/68 °F)

If the resistance is out of specification, replace the EVAP purge control solenoid valve.

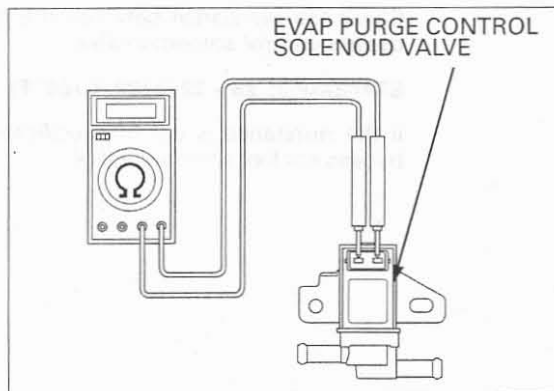

INTAKE AIR DUCT

INTAKE AIR DUCT CONTROL SOLENOID VALVE

Removal/Installation

Remove the left middle cowl (page 3-7).

Disconnect the vacuum hoses and connector from the bypass control solenoid valve.

Remove the bolt and bypass control solenoid valve.

