

FUEL SYSTEM (Programmed Fuel Injection)

Install the middle cowl stay/cable protector and tighten the bolt securely.



Connect the servomotor 6P (Natural) connector.
Install the removed parts in the reverse order of removal.

