


COOLING SYSTEM


Install the new O-ring into the water pump body groove.

Install the water pump cover assembly onto the water pump body.

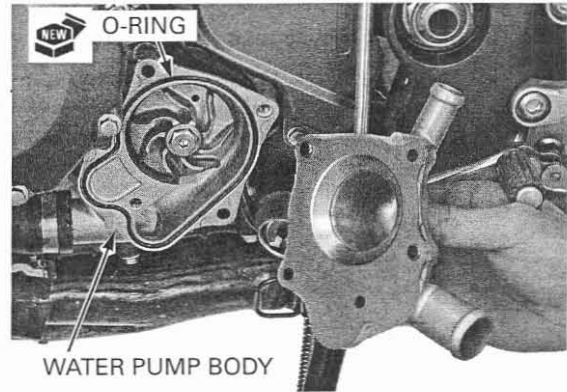

Install a new sealing washer and flange bolts. Tighten the flange bolts to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

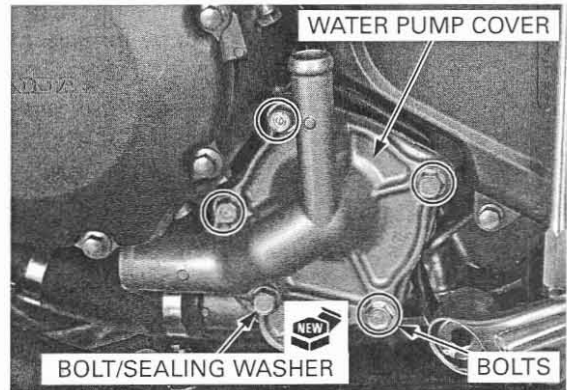

Connect the lower radiator hose and bypass hose, then tighten the clamp screws.

Fill the system with the recommended coolant (page 7-6).

Install the under cowls (page 3-7).

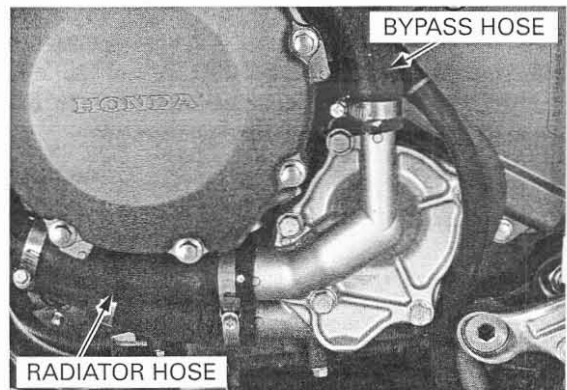

RADIATOR RESERVE TANK

REMOVAL

Remove the right side under cowl/middle cowl (page 3-7).

Disconnect the siphon hose and drain the coolant from the reserve tank.

Remove the bolt and radiator reserve tank.

Installation is in the reverse order of removal.

