



## TRANSMISSION/GEARSHIFT LINKAGE


Remove the mainshaft and countershaft assembly.

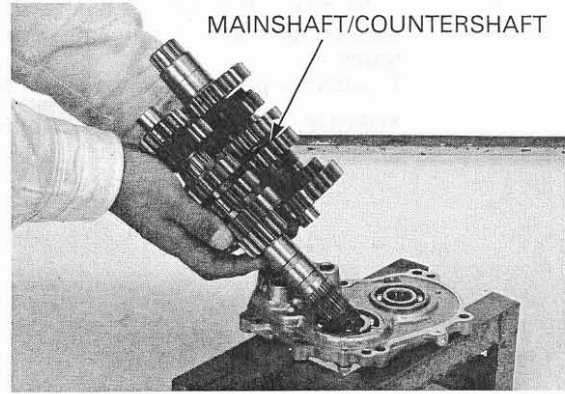

Remove the socket bolt, stopper arm, return spring and washer.

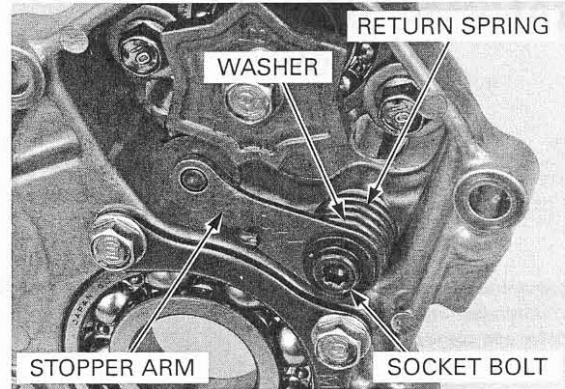

Remove the gearshift cam bolt.

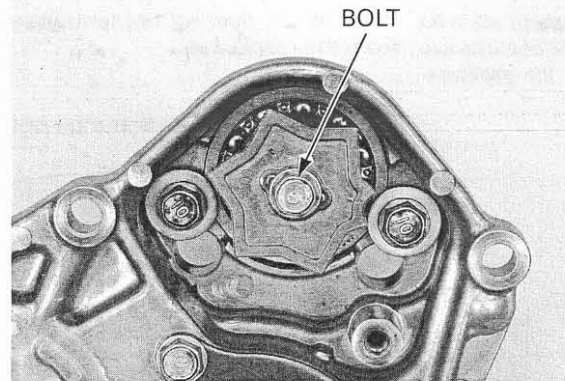

Remove the gearshift cam and dowel pins.  
Remove the flange collar.

