



ASSEMBLY

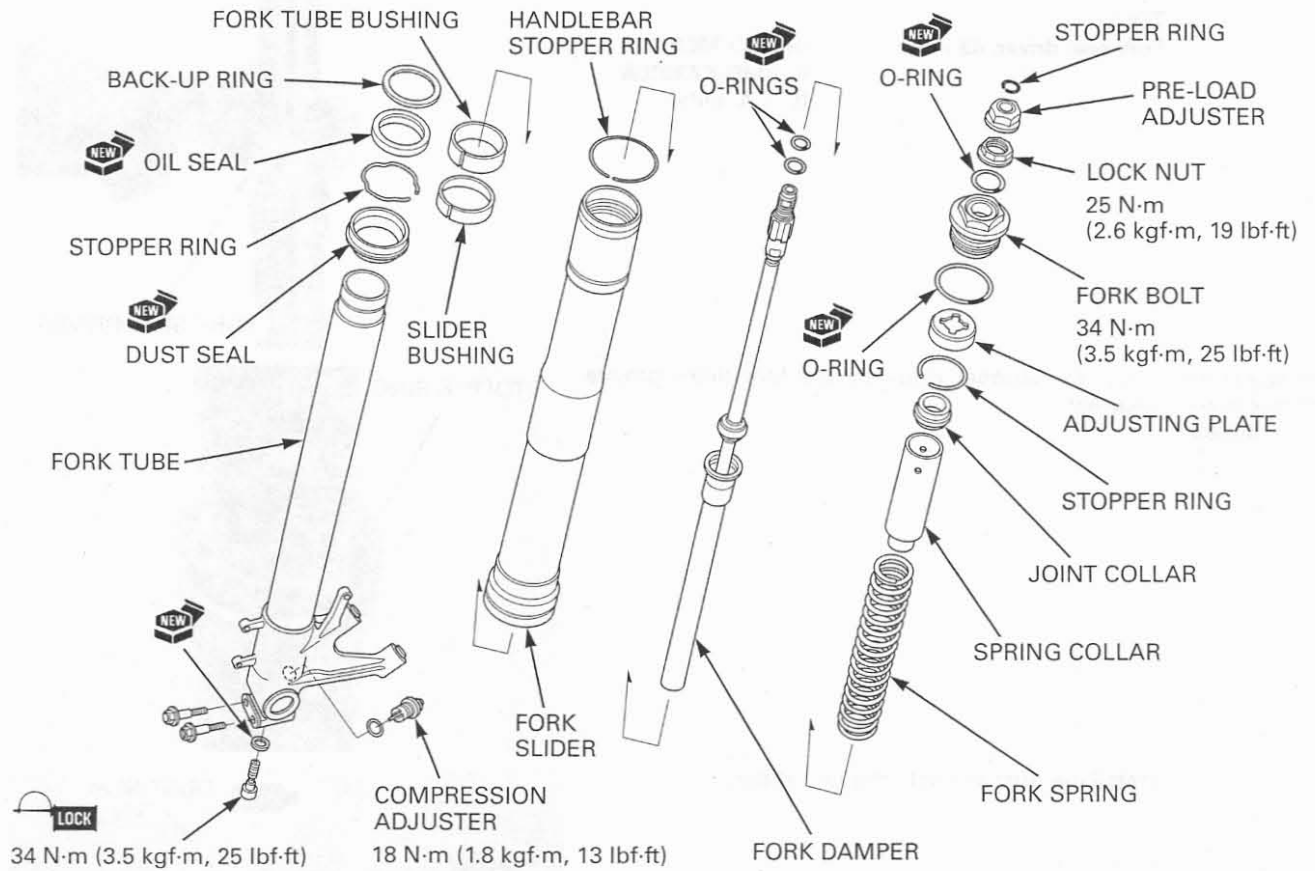

- Before assembly, wash all parts with a high flash or non-flammable solvent and wipe them dry.
- When installing the fork dust seal and oil seal, wrap the edge and groove of the fork tube with tape.

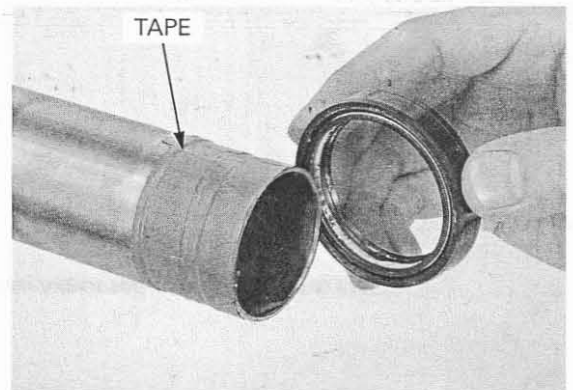

Apply fork fluid to new dust seal and oil seal lips.

*Install the oil seal with its marked side facing toward the axle holder.*

Install the dust seal, stopper ring and oil seal.

*Remove the burrs from the slider bushing mating surface, being careful not to peel off the coating.*

Install the back-up ring, slider bushing and fork tube bushing.

Install the fork tube into the fork slider.

