


STARTER MOTOR

REMOVAL


- With the ignition switch OFF, remove the negative cable at the battery before servicing the starter motor.

Remove the EGCV servo motor (page 6-78).

Remove the rubber cap, terminal nut and starter motor cable.

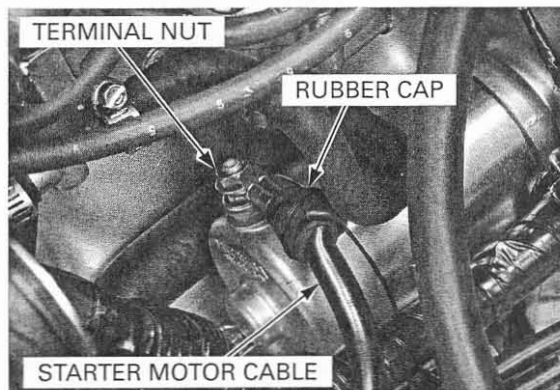

Remove the two mounting bolts and ground cable.

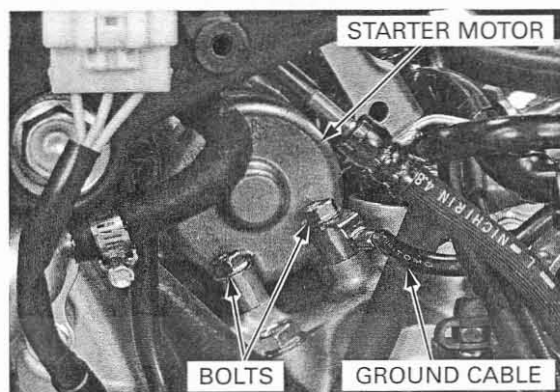

Remove the starter motor from the crankcase.
Remove the O-ring from the starter motor.

