


Install the seat rail and tighten the mounting bolts to the specified torque.


**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

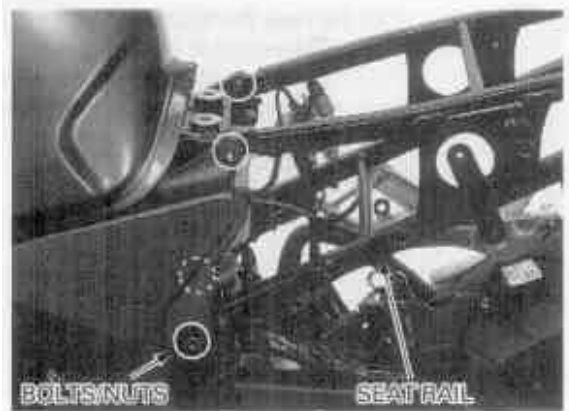

Install the left pillion footpeg holder onto the seat rail, tighten the mounting bolts to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

Install the regulator/rectifier, tighten the bolts.

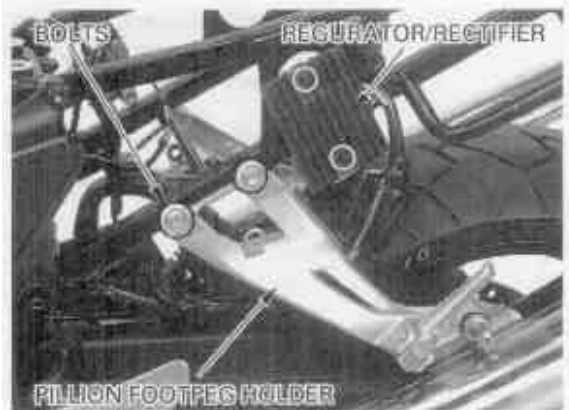

Install the right pillion footpeg holder onto the seat rail, tighten the mounting bolts to the specified torque.

**TORQUE:** 26 N·m (2.7 kgf·m , 20 lbf·ft)

Install and tighten the PCV (Proportional Control Valve) mounting bolts.  
Install and tighten the rear brake hose clamp bolt.

Install the removed parts in the reverse order of removal.



## MUFFLER/EXHAUST PIPE

### REMOVAL

**▲WARNING**

*Do not service the exhaust system while it is hot.*

Remove the lower cowl (page 2-3).

Loosen the exhaust pipe/muffler clamp bolts.

