

Remove the oil filler cap.




Fill the recommended engine oil up to the upper level mark.

### RECOMMENDED ENGINE OIL:

HODA 4-stroke oil or equivalent motor oil  
API service classification: SE, SF or SG  
Viscosity: 10W-40

### NOTE:

Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.

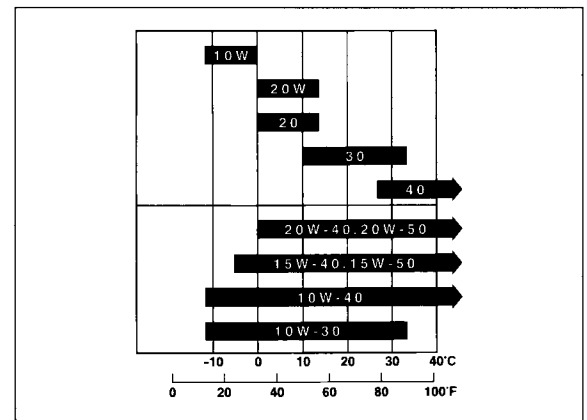

Reinstall the filler cap and dipstick.

## ENGINE OIL & FILTER CHANGE

### ▲WARNING

*If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death.*

Warm up the engine.

### NOTE:

Change the engine oil with the engine warm and the motorcycle on level ground to assure complete draining.



Remove the lower cowl (page 2-3).

Stop the engine and remove the oil filler cap and drain bolt.  
Drain the oil completely.

### CAUTION:

*Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.*

