

Remove and discard the oil filter cartridge using the special tool.

TOOL:

Oil filter wrench 07HAA-PJ70100



Check that the sealing washer on the drain bolt is in good condition, and replace if necessary. Install and tighten the drain bolt.

TORQUE: 29 N·m (3.0 kgf·m , 22 lbf·ft)



Apply oil to the new oil filter O-ring.



Install the new oil filter and tighten it to the specified torque.

TOOL:

Oil filter wrench 07HAA-PJ70100

TORQUE: 10 N·m (1.0 kgf·m , 7 lbf·ft)

