


SYSTEM DIAGRAM

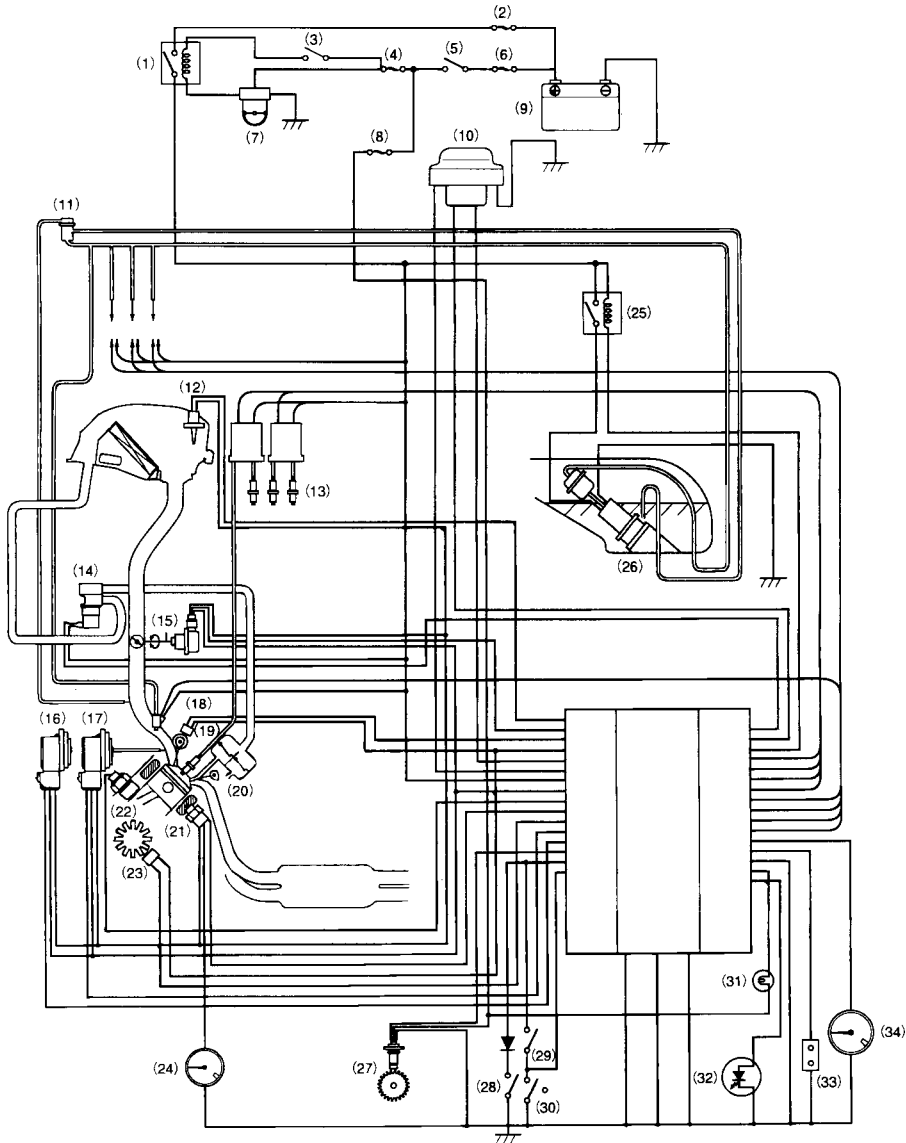

(1)	Engine stop relay
(2)	Main fuse B (30A)
(3)	Engine stop switch
(4)	Sub-fuse (10A)
(5)	Ignition switch
(6)	Main fuse A (30A)
(7)	Bank angle sensor
(8)	Sub-fuse (10A)
(9)	Battery
(10)	Immobilizer receiver
(11)	Pressure regulator
(12)	IAT sensor
(13)	Spark plug
(14)	PAIR solenoid valve
(15)	TP sensor
(16)	BARO sensor
(17)	MAP sensor

(18)	Injector
(19)	Cam pulse generator
(20)	PAIR check valve
(21)	ECT sensor
(22)	Knock sensor
(23)	Ignition pulse generator
(24)	Water temperature meter
(25)	Fuel cut relay
(26)	Fuel pump
(27)	Vehicle speed sensor
(28)	Neutral switch
(29)	Clutch switch
(30)	Side stand switch
(31)	Malfunction indicator
(32)	Immobilizer indicator
(33)	Service check connector
(34)	Tachometer