

Turn the ignition switch ON.



If the ECM has no self diagnosis memory data, the malfunction indicator will illuminate, when you turn the ignition switch ON.

If the ECM has self diagnosis memory data, the malfunction indicator will start blinking when you turn the ignition switch ON.

NOTE:


Even if the PGM-FI has memory data, the malfunction indicator only illuminates (no blinking) under engine running conditions (side stand up and revs above 5,000 min⁻¹ (rpm)).

Note how many times the malfunction indicator blinks, and determine the cause of the problem (page 5-10 through 5-46).

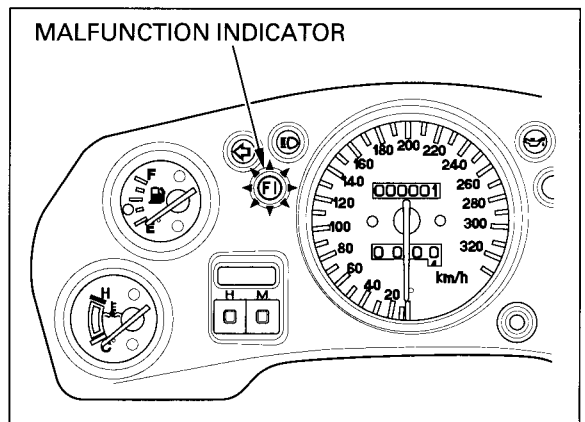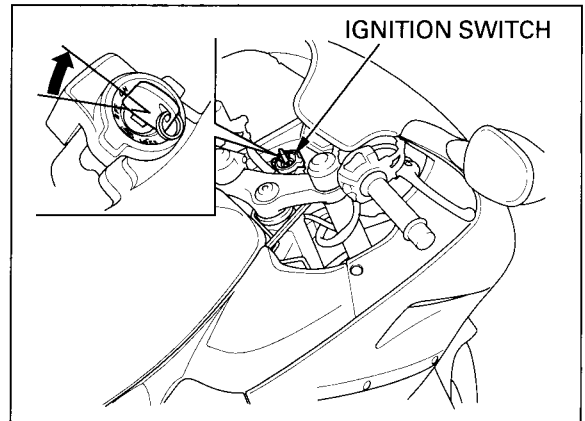

SELF-DIAGNOSIS RESET PROCEDURE

1. Turn the ignition switch OFF.
2. Short the service check connector of the PGM-FI system using a jumper wire.
3. Turn the ignition switch ON.
4. Remove the jumper wire from the service check connector.
5. The malfunction indicator lights about 5 seconds. While the indicator lights, short the service check connector again with the jumper wire. Self diagnosis memory data is erased, if the malfunction indicator turn off and start blinking.

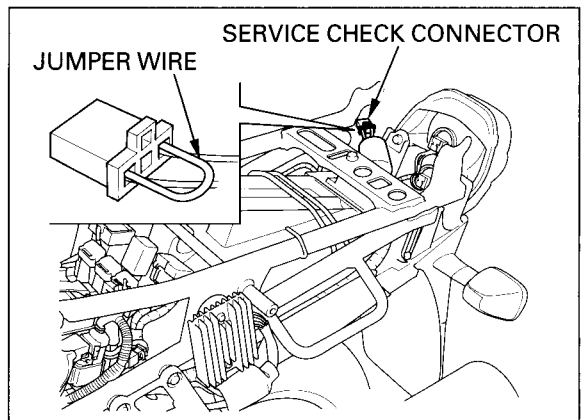

NOTE:

- The service check connector must be jumped while the indicator lights. If not, the malfunction indicator will not start blinking.
- Note that the self diagnosis memory data cannot be erased if you turn off the ignition switch before the malfunction indicator starts blinking.

If the malfunction indicator blinks 20 times, the data has not been erased, so try again.

