



COOLING SYSTEM

Install the thermostat housing cover onto the housing.

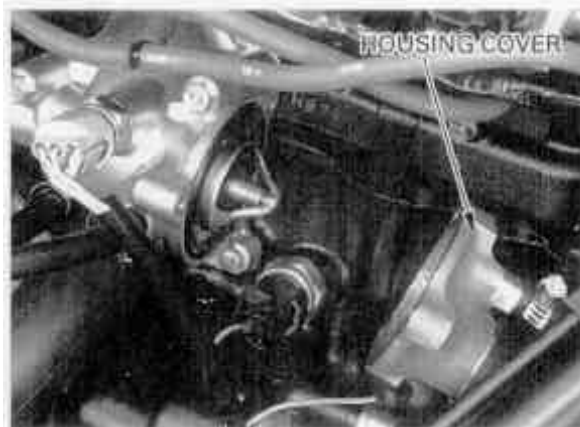

Install and tighten the housing cover bolts.

Fill the system with recommended coolant and bleed the air (page 6-5).

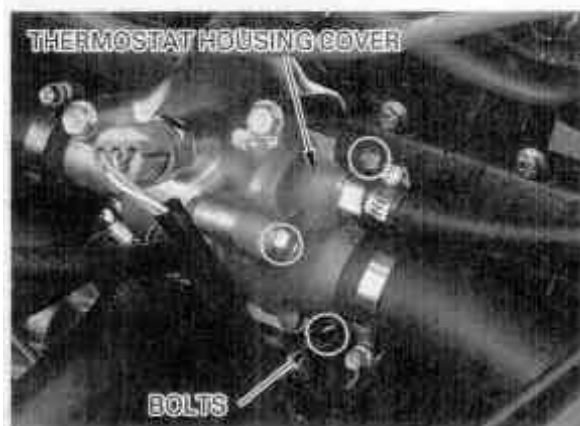

RADIATOR

REMOVAL

Drain the coolant (page 6-4).

Remove the following:

- Lower cowl (page 2-3)
- Wind guard (page 2-14)

Remove the oil cooler mounting bolts and harness guide.

Remove the oil cooler from the brackets and radiator, then move the oil cooler forward.



Disconnect the siphon tube and air bleed tube from the radiator.

Disconnect the upper radiator hose.

