


CLUTCH/GEARSHIFT LINKAGE

Hold the clutch center with the clutch center holder, then remove the lock nut.

TOOL:

Clutch center holder 07724-0050002
(Equivalent commercially available)

Discard the lock nut.

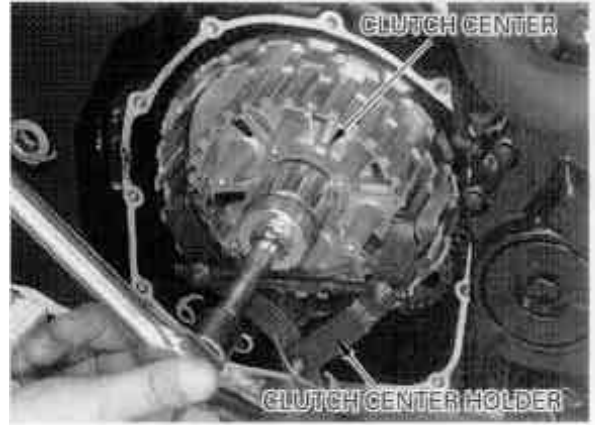

Remove the lock washer, thrust washer and clutch center.



Remove the washer.



Remove the ignition pulse generator rotor cover (page 17-8).

Align the primary drive gear and sub-gear teeth with a screwdriver as shown.
Pull out the clutch outer.

