

HEADLIGHT

BULB REPLACEMENT

▲ WARNING

A halogen headlight bulb becomes very hot while the headlight is ON, and remains hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

Remove the upper cowl covers (page 2-5).

Remove the headlight bulb connectors.
Remove the dust cover.

Unhook the bulb retainer and remove the headlight bulb/socket.

CAUTION:

Avoid touching halogen headlight bulbs. Finger prints can create hot spots that cause a bulb to break.

If you touch the bulb with your bare hands, clean it with cloth moistened with denatured alcohol to prevent early bulb failure.

Remove the headlight bulb from the socket.

Install a new bulb into the socket.

Install the headlight bulb/socket aligning its tabs with the groove in the headlight unit.

